

Make/Model	Year	Procedure
Acura		
CL	1997-2000	Insert key into slot in instrument panel. Lamp will reset.
CL	2001-2003	With ignition off, press and hold "SELECT" and "RESET" buttons on dash and turn ignition to the "ON" position. Continue to hold until lamp resets.
Integra	1994-2001	Detach driver's side lower facia panel. Turn ignition to the "ON" position. Press and hold button until lamp resets.
Legend	1994-1995	Insert key into slot in instrument panel. Lamp will reset.
MDX	2001-2006	With ignition off, press and hold "SELECT" and "RESET" buttons on dash and turn ignition to the "ON" position. Continue to hold until lamp resets.
RL	1996-2004	With ignition off, press and hold "SELECT" and "RESET" buttons on dash and turn ignition to the "ON" position. Continue to hold until lamp resets.
RSX	2002-2006	With ignition off, press and hold reset button on dash and turn ignition to the "ON" position. Continue to hold until lamp resets.
TL	1995-1998	Insert key into slot in instrument panel. Lamp will reset.
TL	1999-2003	With ignition off, press and hold "SELECT" and "RESET" buttons on dash and turn ignition to the "ON" position. Continue to hold until lamp resets.
TL	2004-2006	Turn ignition to the "ON" position. Press "INFO" button on dash until oil life is displayed. Press and hold "SELECT/RESET" button for at least 10 seconds. Release button. To confirm the lamp has been reset, press "SELECT/RESET" button again. To cancel resetting lamp, press "INFO" button.
TSX	2004-2006	With ignition off, press and hold reset button on dash and turn ignition to the "ON" position. Continue to hold until lamp resets.
Audi		
A4	1995-1997	Requires diagnostic tool.
A4	1998-1999	Press and hold button on right side of instrument panel. Turn ignition to the "ON" position. "OIL" or "SERVICE OIL" will appear in display. Release button. Pull out button on left side of instrument panel until "---" or "SERVICE ---" appears in display. Turn ignition off.
A4	2000-2001	With ignition off, press and hold button on right side of instrument panel. Turn ignition to the "ON" position. Release button. "SERVICE!" or "SERVICE IN xxxx MI" will appear in display. Turn button on left side of instrument panel to the left until display clears. Turn ignition off.
A4	2002-2006	With ignition off, press and hold middle button on right side of instrument panel. Turn ignition to the "ON" position. Release button. "SERVICE!" or "SERVICE IN xxxx MI" will appear in display. Press right hand button on right side of instrument panel until display clears. Turn ignition off.
A6	1995-1997	Requires diagnostic tool.
A6	1997-1999	Press and hold button on right side of instrument panel. Turn ignition to the "ON" position. "SERVICE OEL" or "SERVICE OIL" will appear in display. Release button. Pull out button on left side of instrument panel until "---" or "SERVICE ---" appears in display. Turn ignition off.
A6	2000-2004	With ignition off, press and hold button on right side of instrument panel. Turn ignition to the "ON" position. Release button. "SERVICE!" or "SERVICE IN xxxx MI" will appear in display. Press button on left side of instrument panel to the left until display clears. Turn ignition off.
A6	2005-2006	Requires diagnostic tool.
A8	1996-2006	Requires diagnostic tool.
Allroad	2000-2004	With ignition off, press and hold button on right side of instrument panel. Turn ignition to the "ON" position. Release button. "SERVICE!" or "SERVICE IN xxxx MI" will appear in display. Press button on left side of instrument panel to the left until display clears. Turn ignition off.
Cabriolet	2003-2006	With ignition off, press and hold middle button on right side of instrument panel. Turn ignition to the "ON" position. Release button. "SERVICE!" or "SERVICE IN xxxx MI" will appear in display. Press right hand button on right side of instrument panel until display clears. Turn ignition off.
S4	1995-1997	Requires diagnostic tool.
S4	1998-1999	Press and hold button on right side of instrument panel. Turn ignition to the "ON" position. "OIL" or "SERVICE OIL" will appear in display. Release button. Pull out button on left side of instrument panel until "---" or "SERVICE ---" appears in display. Turn ignition off.

Make/Model	Year	Procedure
Audi		
S4	2000-2002	With ignition off, press and hold button on right side of instrument panel. Turn ignition to the "ON" position. Release button. "SERVICE!" or "SERVICE IN xxxx MI" will appear in display. Turn button on left side of instrument panel to the left until display clears. Turn ignition off.
S4	2004-2006	With ignition off, press and hold middle button on right side of instrument panel. Turn ignition to the "ON" position. Release button. "SERVICE!" or "SERVICE IN xxxx MI" will appear in display. Press right hand button on right side of instrument panel until display clears. Turn ignition off.
S6	1995	Requires diagnostic tool.
S6	2002-2003	With ignition off, press and hold button on right side of instrument panel. Turn ignition to the "ON" position. Release button. "SERVICE!" or "SERVICE IN xxxx MI" will appear in display. Press button on left side of instrument panel to the left until display clears. Turn ignition off.
S8	2001-2006	Requires diagnostic tool.
TT	2000-2006	With ignition off, press and hold button on right side of instrument panel. Turn ignition to the "ON" position. Release button. "SERVICE!" or "SERVICE IN xxxx MI" will appear in display. Turn button on left side of instrument panel to the left until display clears. Turn ignition off.
BMW		
3 Series (E36)	1994-2001	Requires LED test light. Turn ignition to the "ON" position. Connect test light between terminal 7 of the diagnostic connector and ground. After being connected for three seconds, five green LEDs will light up. Turn ignition off.
3 Series (E46)	1998-2000	Requires LED test light. Turn ignition to the "ON" position. Connect test light between terminal 7 of the diagnostic connector and ground. After being connected for three seconds, five green LEDs will light up. Turn ignition off.
3 Series (E46)	2000-2006	Turn ignition off. Press and hold button to left of speedometer. Turn ignition to the "I" position. After 5 seconds, "OIL SERVICE" or "INSPECTION" will display. Release button. Press and hold button again. After 5 seconds, "RESET" will flash. Release button. Press button once more. New interval is displayed. Press and hold button again. After 5 seconds, the time-based interval is displayed. Release button. Press and hold button again. After 5 seconds, "RESET" will flash. Release button. Press button again. New interval is displayed. Press button a final time. "END SIA" is displayed. Turn ignition off.
3 Series Hatchback	1994-2001	Requires LED test light. Turn ignition to the "ON" position. Connect test light between terminal 7 of the diagnostic connector and ground. After being connected for three seconds, five green LEDs will light up. Turn ignition off.
5 Series (E34)	1994-1996	Requires LED test light. Turn ignition to the "ON" position. Connect test light between terminal 7 of the diagnostic connector and ground. After being connected for three seconds, five green LEDs will light up. Turn ignition off.
5 Series (E39)	1996-2000	Requires LED test light. Turn ignition to the "ON" position. Connect test light between terminal 7 of the diagnostic connector and ground. After being connected for three seconds, five green LEDs will light up. Turn ignition off.
5 Series (E39)	2000-2003	Turn ignition off. Press and hold button to left of speedometer. Turn ignition to the "I" position. After 5 seconds, "OIL SERVICE" or "INSPECTION" will display. Release button. Press and hold button again. After 5 seconds, "RESET" will flash. Release button. Press button once more. New interval is displayed. Press and hold button again. After 5 seconds, the time-based interval is displayed. Release button. Press and hold button again. After 5 seconds, "RESET" will flash. Release button. Press button again. New interval is displayed. Press button a final time. "END SIA" is displayed. Turn ignition off.
5 Series (E60)	2004-2006	Can only be reset if oil life is below 80% and "!" is present next to indicator lamp. Turn ignition to the "ON" position. Press and hold button to the left of the speedometer until first item is displayed (approx. 10 seconds). Press button until desired indicator is displayed. Press and hold button until

		RESET? is displayed. Press and hold button again for at least 3 seconds. Turn ignition off.
6 Series	2004-2006	Can only be reset if oil life is below 80% and "!" is present next to indicator lamp. Turn ignition to the "ON" position. Press and hold button to the left of the speedometer until first item is displayed (approx. 10 seconds). Press button until desired indicator is displayed. Press and hold button until RESET? is displayed. Press and hold button again for at least 3 seconds. Turn ignition off.
7 Series (E38)	1994-2002	Requires LED test light. Turn ignition to the "ON" position. Connect test light between terminal 7 of the diagnostic connector and ground. After being connected for three seconds, five green LEDs will light up. Turn ignition off.
7 Series (E65/E66)	2002-2006	Can only be reset if oil life is below 80% and "!" is present next to indicator lamp. Turn ignition to the "ON" position. Press and hold button to the left of the speedometer until first item is displayed (approx. 10 seconds). Press button until desired indicator is displayed. Press and hold button until RESET? is displayed. Press and hold button again for at least 3 seconds. Turn ignition off.
X3	2004-2006	Turn ignition off. Press and hold left hand button to the right of the speedometer. Turn ignition to the "I" position. Continue to hold button until OIL SERVICE or "INSPECTION" is displayed. Release button. Press and hold button again until "RESET" or "RE" flashes. Release button. Press button again. New interval is displayed. Press button once more. "END SIA" is displayed.
X5	1999-2000	Requires LED test light. Turn ignition to the "ON" position. Connect test light between terminal 7 of the diagnostic connector and ground. After being connected for three seconds, five green LEDs will light up. Turn ignition off.
X5	2000-2006	Turn ignition off. Press and hold button to left of speedometer. Turn ignition to the "I" position. After 5 seconds, "OIL SERVICE" or "INSPECTION" will display. Release button. Press and hold button again. After 5 seconds, "RESET" will flash. Release button. Press button once more. New interval is displayed. Press and hold button again. After 5 seconds, the time-based interval is displayed. Release button. Press and hold button again. After 5 seconds, "RESET" will flash. Release button. Press button again. New interval is displayed. Press button a final time. "END SIA" is displayed. Turn ignition off.
Z3	1996-2002	Requires LED test light. Turn ignition to the "ON" position. Connect test light between terminal 7 of the diagnostic connector and ground. After being connected for three seconds, five green LEDs will light up. Turn ignition off.
Z4	2003-2006	Press and hold left hand button between gauges. Turn ignition switch to the "ON" position. Keep holding button until "OIL SERVICE" or "INSPECTION" is displayed. Release button. Press and hold button again until "RESET?" is displayed. Press and hold button again for at least 3 seconds. Turn ignition off.
Z8	2000-2003	Requires LED test light. Turn ignition to the "ON" position. Connect test light between terminal 7 of the diagnostic connector and ground. After being connected for three seconds, five green LEDs will light up. Turn ignition off.

Buick

Century	1997-2006	With DIC: Turn ignition to the "ON" position. Press "MODE" button repeatedly until oil life is displayed. Press and hold "RESET" for 5 seconds. Without DIC: Turn ignition to the "ON" position. Slowly depress accelerator pedal 3 times within 5 seconds. "CHANGE OIL SOON" lamp will flash. Turn ignition off. Start engine. Oil life will display 100%.
LaCrosse	2005-2006	With DIC: Turn ignition to the "ON" position. Press "i" button repeatedly until "ENGINE OIL MONITOR" is displayed. Press button with the arrow pointing left until "CHANGE OIL SOON" message has been reset. Turn ignition off. Without DIC: Turn ignition to the "ON" position. Slowly depress accelerator pedal 3 times within 5 seconds. Turn ignition off.
LeSabre	1994-2006	With DIC: Turn ignition to the "ON" position. Press "MODE" button repeatedly until oil life is displayed. Press and hold "RESET" for 5 seconds. Without DIC: Turn ignition to the "ON" position. Slowly depress accelerator pedal 3 times within 5 seconds. "CHANGE OIL SOON" lamp will flash. Turn ignition off. Start engine. Oil life will display 100%.

Park Avenue	1994-2006	With DIC: Turn ignition to the "ON" position. Press "MODE" button repeatedly until oil life is displayed. Press and hold "RESET" for 5 seconds. Without DIC: Turn ignition to the "ON" position. Slowly depress accelerator pedal 3 times within 5 seconds. "CHANGE OIL SOON" lamp will flash. Turn ignition off. Start engine. Oil life will display 100%.
Rainier	2003-2006	With DIC: Turn ignition to the "ON" position. Press "FUEL INFORMATION" button repeatedly until "ENGINE OIL LIFE" is displayed. Press and hold button with the arrow pointing left until "OIL LIFE RESET" is displayed. Without DIC: Turn ignition to the "ON" position. Slowly depress accelerator pedal 3 times within 5 seconds. "CHANGE OIL SOON" lamp will flash. Turn ignition off. Start engine. Oil life will display 100%.
Regal	1997-2005	With DIC: Turn ignition to the "ON" position. Press "MODE" button repeatedly until oil life is displayed. Press and hold "RESET" for 5 seconds. Without DIC: Turn ignition to the "ON" position. Slowly depress accelerator pedal 3 times within 5 seconds. "CHANGE OIL SOON" lamp will flash. Turn ignition off. Start engine. Oil life will display 100%.
Rendezvous	2002-2006	With DIC: Turn ignition to the "ON" position. Press "MODE" button repeatedly until oil life is displayed. Press and hold "RESET" for 5 seconds. Without DIC: Turn ignition to the "ON" position. Slowly depress accelerator pedal 3 times within 5 seconds. "CHANGE OIL SOON" lamp will flash. Turn ignition off. Start engine. Oil life will display 100%.
Riviera	1998-1999	With DIC: Turn ignition to the "ON" position. Press "MODE" button repeatedly until oil life is displayed. Press and hold "RESET" for 5 seconds. Without DIC: Turn ignition to the "ON" position. Slowly depress accelerator pedal 3 times within 5 seconds. "CHANGE OIL SOON" lamp will flash. Turn ignition off. Start engine. Oil life will display 100%.
Roadmaster	1994-1996	Turn ignition to the "ON" position. Slowly depress accelerator pedal 3 times within 5 seconds. "CHANGE OIL SOON" lamp will flash. Turn ignition off. Start engine. Oil life will display 100%.
Terraza	2005-2006	Turn ignition to the "ON" position. Press button with the arrow pointing left until "OIL" is displayed. Press and hold button until oil life displays "100%". Turn ignition off.

Cadillac

CTS	2002-2006	With navigation system. Press "PWR/VOL" button. Press "INFO" button. Turn "TUNE/SEL" knob until "ENGINE OIL LIFE" is chosen. Press and hold "RESET" button until oil life displays "100%".
DeVille	1994-1997	With DIC: Turn ignition to the "ON" position. Push info button until "OIL LIFE" is displayed. Press and hold "CLR" or "RESET" button until "100%" is displayed. With navigation system: With engine running, press "PWR/VOL" button. Press and hold "INFO" until information menu is entered. Select ENGINE OIL LIFE. Press and hold "RESET" button until "100%" is displayed.
DeVille	1998	With DIC: Turn ignition to "RUN" position. Press the "TRIP" button until "OIL LIFE REMAINING" is displayed. Press and hold "RESET" until "100%" is displayed. Turn ignition off.
DeVille	1999-2005	With DIC: Turn ignition to the "ON" position. Push info button until "OIL LIFE" is displayed. Press and hold "CLR" or "RESET" button until "100%" is displayed. With navigation system: With engine running, press "PWR/VOL" button. Press and hold "INFO" until information menu is entered. Select ENGINE OIL LIFE. Press and hold "RESET" button until "100%" is displayed.
Eldorado	1994-1997	With DIC: Turn ignition to the "ON" position. Push info button until "OIL LIFE" is displayed. Press and hold "CLR" or "RESET" button until "100%" is displayed. With navigation system: With engine running, press "PWR/VOL" button. Press and hold "INFO" until information menu is entered. Select

		ENGINE OIL LIFE. Press and hold "RESET" button until "100%" is displayed.
Eldorado	1998	With DIC: Turn ignition to "RUN" position. Press the "TRIP" button until "OIL LIFE REMAINING" is displayed. Press and hold "RESET" until "100%" is displayed. Turn ignition off.
Eldorado	1999-2002	With DIC: Turn ignition to the "ON" position. Push info button until "OIL LIFE" is displayed. Press and hold "CLR" or "RESET" button until "100%" is displayed. With navigation system: With engine running, press "PWR/VOL" button. Press and hold "INFO" until information menu is entered. Select ENGINE OIL LIFE. Press and hold "RESET" button until "100%" is displayed.
Escalade	1999-2006	Turn ignition to the "ON" position. Slowly depress accelerator pedal 3 times within 5 seconds. "CHANGE OIL SOON" lamp will flash. Turn ignition off. Start engine. Oil life will display 100%.
Fleetwood	1994-1995	Turn ignition to the "ON" position. Slowly depress accelerator pedal 3 times within 5 seconds. "CHANGE OIL SOON" lamp will flash. Turn ignition off. Start engine. Oil life will display 100%. With DIC: Turn ignition to the "ON" position. Push info button until "OIL LIFE" is displayed. Press and hold "CLR" or "RESET" button until "100%" is displayed. With navigation system: With engine running, press "PWR/VOL" button. Press and hold "INFO" until information menu is entered. Select ENGINE OIL LIFE. Press and hold "RESET" button until "100%" is displayed.
Seville	1994-1997	With DIC: Turn ignition to the "ON" position. Push info button until "OIL LIFE" is displayed. Press and hold "CLR" or "RESET" button until "100%" is displayed. With navigation system: With engine running, press "PWR/VOL" button. Press and hold "INFO" until information menu is entered. Select ENGINE OIL LIFE. Press and hold "RESET" button until "100%" is displayed.
Seville	1998	With DIC: Turn ignition to "RUN" position. Press the "TRIP" button until "OIL LIFE REMAINING" is displayed. Press and hold "RESET" until "100%" is displayed. Turn ignition off.
Seville	1999-2004	With DIC: Turn ignition to the "ON" position. Push info button until "OIL LIFE" is displayed. Press and hold "CLR" or "RESET" button until "100%" is displayed. With navigation system: With engine running, press "PWR/VOL" button. Press and hold "INFO" until information menu is entered. Select ENGINE OIL LIFE. Press and hold "RESET" button until "100%" is displayed.
SRX	2003-2006	With DIC: Turn ignition to the "ON" position. Push info button until "OIL LIFE" is displayed. Press and hold "CLR" or "RESET" button until "100%" is displayed. With navigation system: With engine running, press "PWR/VOL" button. Press and hold "INFO" until information menu is entered. Select ENGINE OIL LIFE. Press and hold "RESET" button until "100%" is displayed.
STS	2005-2006	Turn the ignition to the "ON" position. Press the up arrow button to the left of the steering wheel until "ENGINE OIL LIFE" is displayed. Press and hold the "RESET" button until "100%" is displayed.
XLR	2005-2006	Turn the ignition to the "ON" position. Press the top button to the right of the steering wheel until "ENGINE OIL LIFE" is displayed. Press and hold the "RESET" button until "100%" is displayed.

Chevrolet

Avalanche	2002-2006	Turn ignition to the "ON" position. Slowly depress accelerator pedal 3 times within 5 seconds. "CHANGE ENGINE OIL" lamp will flash. Turn ignition off. Start engine. Oil life will display 100%.
-----------	-----------	--

		With DIC: Turn ignition to the "ON" position. Press "FUEL INFORMATION" button repeatedly until "OIL LIFE" is displayed. Press and hold button with the arrow pointing left until "100%" is displayed.
Camaro	1999-2002	Turn ignition to the "ON" position. Press and hold "TRIP/OIL RESET" button until "OIL CHANGE" stops flashing and extinguishes. Turn ignition off.
Chevy Van/Express	2003-2006	Turn ignition to the "ON" position. Slowly depress accelerator pedal 3 times within 5 seconds. "CHANGE ENGINE OIL" lamp will flash. Turn ignition off. Start engine. Oil life will display 100%.
Cobalt	2005-2006	Turn ignition to the "ON" position. Press the "i" button and the button with the arrow pointing left at the same time. Press the "i" button until "OIL-LIFE RESET" is displayed. Press and hold the button with the arrow point left button until "ACKNOWLEDGED" is displayed. Turn ignition off.
Colorado	2004-2006	Turn ignition to the "ON" position. Press the button below the speedometer until "OIL-LIFE" is displayed. "OIL LIFE" and "RESET" will flash. Press and hold button until three chimes are heard. Turn ignition off.
Corvette	1997-2000	Turn ignition to the "ON" position. Press the trip button. "OIL LIFE" percentage is displayed. Press and hole "RESET" button until "RESET" is displayed followed by "OIL LIFE 99%". Turn ignition off.
Corvette	2001-2005	Turn ignition to the "ON" position. Press "TRIP" button. "OIL LIFE" percentage is displayed. Press and hold "RESET" button until "OIL LIFE REMAIN 100%" is displayed. Turn ignition off.
Equinox	2005-2006	Turn ignition to the "ON" position. Slowly depress accelerator pedal 3 times within 5 seconds. "CHANGE OIL SOON" lamp will flash. Turn ignition off.
Impala	2000-2006	Turn ignition to the "ON" position. Slowly depress accelerator pedal 3 times within 5 seconds. "CHANGE ENGINE OIL" lamp will flash. Turn ignition off. Start engine. Oil life will display 100%. With RDS: Turn radio off. Turn ignition to the "ON" position. Press and hold large, lower-lefthand button on radio until "SETTINGS" is displayed. Press "SEEK/PYTYPE" or "SEEK/PSCAN" to scroll through menu until "OIL LIFE" is displayed. Press "PREV/NEXT" to enter submenu. "RESET" will display. Press the large button again, a chime will sound and "DONE" will be displayed. Press "SEEK/PYTYPE" or "SEEK/PSCAN" until "EXIT" is displayed. Press the large button again to exit, a chime will sound.
Lumina	1998-2001	Turn ignition to the "ON" position. Slowly depress accelerator pedal 3 times within 5 seconds. "CHANGE ENGINE OIL" lamp will flash. Turn ignition off. Start engine. Oil life will display 100%.
Monte Carlo	1998-2006	Turn ignition to the "ON" position. Slowly depress accelerator pedal 3 times within 5 seconds. "CHANGE ENGINE OIL" lamp will flash. Turn ignition off. Start engine. Oil life will display 100%. With RDS: Turn radio off. Turn ignition to the "ON" position. Press and hold large, lower-lefthand button on radio until "SETTINGS" is displayed. Press "SEEK/PYTYPE" or "SEEK/PSCAN" to scroll through menu until "OIL LIFE" is displayed. Press "PREV/NEXT" to enter submenu. "RESET" will display. Press the large button again, a chime will sound and "DONE" will be displayed. Press "SEEK/PYTYPE" or "SEEK/PSCAN" until "EXIT" is displayed. Press the large button again to exit, a chime will sound.
Silverado	1999-2006	Turn ignition to the "ON" position. Slowly depress accelerator pedal 3 times within 5 seconds. "CHANGE ENGINE OIL" lamp will flash. Turn ignition off. Start engine. Oil life will display 100%.
SSR	2003-2006	Turn the ignition to the "ON" position. Press "FUEL INFORMATION" button until "ENGINE OIL LIFE" is displayed. Press and hold button with the arrow pointing left until "100%" is displayed. Turn ignition off.
Suburban	1996-2006	Turn ignition to the "ON" position. Slowly depress accelerator pedal 3 times within 5 seconds. "CHANGE ENGINE OIL" lamp will flash. Turn ignition off. Start engine. Oil life will display 100%. With DIC: Turn ignition to the "ON" position. Press "FUEL INFORMATION" button until "ENGINE OIL LIFE" is displayed. Press and hold button with the arrow pointing left until "OIL LIFE RESET" is displayed.

Tahoe	2000-2006	Turn ignition to the "ON" position. Slowly depress accelerator pedal 3 times within 5 seconds. "CHANGE ENGINE OIL" lamp will flash. Turn ignition off. Start engine. Oil life will display 100%. With DIC: Turn ignition to the "ON" position. Press "FUEL INFORMATION" button until "ENGINE OIL LIFE" is displayed. Press and hold button with the arrow pointing left until "OIL LIFE RESET" is displayed.
Trailblazer	2002-2006	Turn ignition to the "ON" position. Slowly depress accelerator pedal 3 times within 5 seconds. "CHANGE ENGINE OIL" lamp will flash. Turn ignition off. Start engine. Oil life will display 100%. With DIC: Turn ignition to the "ON" position. Press "FUEL INFORMATION" button repeatedly until "OIL LIFE" is displayed. Press and hold button with the arrow pointing left until "100%" is displayed.
Uplander	2005-2006	Turn ignition to the "ON" position. Press button with the arrow pointing left until "OIL" is displayed. Press and hold button until oil life displays "100%". Turn ignition off.
Venture	2000	Turn ignition to the "ON" position. Slowly depress accelerator pedal 3 times within 5 seconds. "CHANGE ENGINE OIL" lamp will flash. Turn ignition off. Start engine. Oil life will display 100%.
Venture	2001-2005	With DIC: Turn ignition to the "RUN" position with engine off. Press button to the right of the temperature gauge until "OIL" is displayed. Press and hold button until "100%" is displayed. Turn ignition off.

Chrysler

300	2005-2006	Requires diagnostic tool.
Crossfire	2004-2006	Turn ignition to the "ON" position. Quickly press button to the left of the speedometer twice. Turn ignition off. Press and hold button and turn ignition to the "ON" position. Continue to hold button until new interval is displayed and a chime is heard. Turn ignition off.

Ford

Escape	2005-2006	Turn ignition to the "ON" position. Press "SET" button until "PRESS SET FOR SYS CHECK" is displayed. Press button again. Press and hold button until "OIL CHANGE SET TO 100%" is displayed. Turn ignition off.
Explorer	1995-2001	Turn the ignition to the "ON" position. Press and hold "OIL CHANGE RESET" button until new oil life percentage is displayed.
Explorer	2002-2006	Turn ignition to the "ON" position. Press "SETUP" button. Press "RESET" button. Press and hold "RESET" button until "IF NEW OIL HOLD RESET" is displayed. Press and hold "RESET" button until "OIL LIFE RESET TO 100%" is displayed.
Five Hundred	2005-2006	With DIC: (If "CHANGE OIL SOON" or "OIL CHANGE REQUIRED" is displayed.) Turn ignition to the "ON" position. Press middle button on right side of steering wheel until "OIL LIFE XX% RESET IF NEW" is displayed. Press bottom button on right side of steering wheel. Press and hold bottom button until "OIL LIFE IS RESET TO 100%" is displayed. Turn ignition off. With DIC: (If "CHANGE OIL SOON" or "OIL CHANGE REQUIRED" is NOT displayed.) Turn ignition to the "ON" position. Press middle button on right side of steering wheel until "PRESS RESET FOR SYS CHECK" is displayed. Press bottom button on right side of steering wheel. Press and hold bottom button until "IF NEW OIL HOLD RESET" is displayed. Press and hold bottom button until "OIL LIFE SET TO 100%" is displayed. Turn ignition off. Without DIC: Turn ignition to the "ON" position. Press button below speedometer until "OIL LIFE XX%" is displayed. Press and hold button until "OIL LIFE 100%" is displayed. Press button until odometer is displayed again.
Windstar	1999-2003	Turn ignition to the "ON" position. Press "SETUP" button. Press "RESET" button. Press and hold "RESET" button until "IF NEW OIL HOLD RESET" is displayed. Press and hold "RESET" button until "OIL LIFE RESET TO 100%" is displayed.

GMC

Canyon	2005-2006	Turn ignition to the "ON" position. Press the button below the speedometer until "OIL-LIFE" is displayed. "OIL LIFE" and "RESET" will flash. Press and hold button until three chimes are heard. Turn ignition off.
Envoy	2002-2006	Turn ignition to the "ON" position. Slowly depress accelerator pedal 3 times within 5 seconds. "CHANGE ENGINE OIL" lamp will flash. Turn ignition off. Start engine.
Savana	2003-2006	Turn ignition to the "ON" position. Slowly depress accelerator pedal 3 times within 5 seconds. "CHANGE ENGINE OIL" lamp will flash. Turn ignition off. Start engine.
Sierra	1999-2006	Turn ignition to the "ON" position. Slowly depress accelerator pedal 3 times within 5 seconds. "CHANGE ENGINE OIL" lamp will flash. Turn ignition off. Start engine. Oil life will display 100%.
Yukon	2000-2006	Turn ignition to the "ON" position. Slowly depress accelerator pedal 3 times within 5 seconds. "CHANGE ENGINE OIL" lamp will flash. Turn ignition off. Start engine. Oil life will display 100%. With DIC: Turn ignition to the "ON" position. Press "FUEL INFORMATION" button until "ENGINE OIL LIFE" is displayed. Press and hold button with the arrow pointing left until "OIL LIFE RESET" is displayed.
Yukon Denali	2001-2006	Turn ignition to the "ON" position. Slowly depress accelerator pedal 3 times within 5 seconds. "CHANGE ENGINE OIL" lamp will flash. Turn ignition off. Start engine. Oil life will display 100%. With DIC: Turn ignition to the "ON" position. Press "FUEL INFORMATION" button until "ENGINE OIL LIFE" is displayed. Press and hold button with the arrow pointing left until "OIL LIFE RESET" is displayed.

Honda

Accord	1994-1997	Insert key into slot in instrument panel. Lamp will reset.
Accord	1998-2002	With ignition off, press and hold "SELECT/RESET" button on dash and turn ignition to the "ON" position. Continue to hold until lamp resets.
Accord	2003-2006	With ignition off, press and hold button to the left of the temperature gauge and turn ignition to the "ON" position. Continue to hold until lamp resets.
Civic	1996-2000	Insert key into slot in instrument panel. Lamp will reset.
Civic	2001-2006	With ignition off, press and hold button below to the right of the speedometer and turn ignition to the "ON" position. Continue to hold until lamp resets.
CR-V	1997-2001	Insert key into slot in instrument panel. Lamp will reset.
CR-V	2002-2006	With ignition off, press and hold button below to the right of the speedometer and turn ignition to the "ON" position. Continue to hold until lamp resets.
Element	2003-2006	With ignition off, press and hold "SELECT/RESET" button on dash and turn ignition to the "ON" position. Continue to hold until lamp resets.
Insight	2000-2006	With ignition off, press and hold "TRIP" button on dash and turn ignition to the "ON" position. Continue to hold until lamp resets.
Odyssey	1995-1997	Insert key into slot in instrument panel. Lamp will reset.
Odyssey	1998-2006	With ignition off, press and hold "SELECT/RESET" button on dash and turn ignition to the "ON" position. Continue to hold until lamp resets.
Pilot	2002-2006	With ignition off, press and hold "SELECT/RESET" button on dash and turn ignition to the "ON" position. Continue to hold until lamp resets.
Prelude	1997-2001	Insert key into slot in instrument panel. Lamp will reset.
S2000	2000-2006	With ignition off, press and hold "TRIP" button on dash and turn ignition to the "ON" position. Continue to hold until lamp resets.

Isuzu

Ascender	2003-2006	Turn ignition to the "ON" position. Slowly depress accelerator pedal 3 times within 5 seconds. "CHANGE ENGINE OIL" lamp will flash. Turn ignition off. Start engine. Oil life will display 100%. With DIC: Turn ignition to the "ON" position. Press "FUEL INFORMATION" button repeatedly until "OIL LIFE" is displayed. Press and hold button with the arrow pointing left until "100%" is displayed.
----------	-----------	---

Oasis	1998-1999	With ignition off, press and hold "SELECT/RESET" button on dash and turn ignition to the "ON" position. Continue to hold until lamp resets.
Land Rover		
LR3	2005-2006	Press and hold button at the end of the turn signal. Turn ignition to the "II" position. Keep button pressed until lamp flashes and release. Press and hold button again until "RESET" message appears.
Range Rover	2003-2006	With ignition off, press and hold button on bottom left of speedometer. Turn ignition to the "I" position. Release button when message is shown. Press button again. Press and hold button again until another message is displayed. Press and hold button again until message starts to flash. Press button again.
Lexus		
ES330	2004-2006	With ignition off, press and hold button below fuel gauge. Turn ignition to the "ON" position. Continue to hold button until "000000" is displayed in the odometer and the "MAINT REQD" lamp resets.
GX470	2003-2006	With ignition off, press and hold button below to the right of the gear selector display. Turn ignition to the "ON" position. Continue to hold button until 000000 is displayed in the odometer and the "MAINT REQD" lamp resets.
IS300	2000-2005	With ignition off, press and hold button below to the right of the gear selector display. Turn ignition to the "ON" position. Continue to hold button until "MAINT REQD" lamp resets.
LS430	2001-2006	With ignition off, press and hold right hand button below the fuel gauge. Turn the ignition to the "ON" position. Continue to hold button until "Mileage Reset" is displayed and a chime sounds.
LX470	2003-2006	With ignition off, press and hold button below the odometer. Turn ignition to the "ON" position. Continue to hold button until "MAINT REQD" lamp resets.
RX330	2004-2006	With ignition off, press and hold reset button. Turn ignition to the "ON" position. Continue to hold button until 000000 is displayed in the odometer and the "MAINT REQD" lamp resets.
RX400H	2005-2006	With ignition off, press and hold reset button. Turn ignition to the "ON" position. Continue to hold button until 000000 is displayed in the odometer and the "MAINT REQD" lamp resets.
Lincoln		
Aviator	2003-2006	Turn the ignition to the "ON" position. Press "SETUP" button. "PRESS RESET FOR SYSTEM CHECK" is displayed. Press "RESET" button. "OIL LIFE % HOLD RESET NEW" is displayed. Press and hold "RESET" button until "IF NEW OIL HOLD RESET" is displayed. Press and hold "RESET" button until "OIL LIFE RESET TO 100%" is displayed.
Continental	1994	Turn the ignition to the "ON" position. Press "SYSTEM CHECK" button. During check sequence, press "RESET" button. Reminder will begin to flash. Press the "RESET" and "SYSTEM CHECK" buttons at the same time. Reminder is now reset.
LS	2000-2006	Turn the ignition to the "ON" position. Press "STATUS" button. "OIL LIFE % RESET FOR NEW" is displayed. Press "RESET" button. "IF NEW OIL HOLD RESET" is displayed. Press and hold "RESET" button until "OIL LIFE SET TO %" is displayed.
Mark VIII	1997-1998	Turn the ignition to the "ON" position. Press "VEHICLE SETTINGS" button until "OIL CHANGE RESET" is displayed. Press and hold "RESET" button until message counter counts down. "OIL LIFE RESET TO 100%" will be displayed.
Town Car	2004-2006	Turn the ignition to the "ON" position. Press "MODE" button until "OIL LIFE %" is displayed. Press and hold "MODE" button until "RESET FOR NEW OIL LIFE" is displayed. Press "RESET" button. "100%" will be displayed.
Mercedes-Benz		
C-Class	1997-1999	Turn the ignition to the "II" position and immediately press "O" button located below "+" and "-" buttons. Turn the ignition to the "O" position. Press and hold "O" button and turn the ignition to the "II" position. When new interval is displayed, release "O" button. Turn the ignition to the "OFF" position.

C-Class	2000-2006	Turn the ignition to the "I" position. Press lower left hand button on the left side of the steering wheel repeatedly until both total and trip mileage are displayed. Press upper left hand button on the left side of the steering wheel repeatedly until the service symbol and the mileage remaining are displayed. Press and hold "R" button on left side of the gauge cluster until "DO YOU WANT TO RESET THE SERVICE INTERVAL? CONFIRM BY PRESSING THE R BUTTON" is displayed. Within 4 seconds, press and hold "R" button again until the interval is reset. Turn the ignition off.
CL (140)	1997-1999	Turn the ignition to the "II" position and immediately press button to the bottom left of the speedometer twice within a second. Turn the ignition to the "O" position. Press and hold the same button while turning the ignition to the "II" position. Once the new interval is displayed, release button. Turn the ignition off.
CL (215)	1999-2006	Turn the ignition to the "I" position. Press lower left hand button on the left side of the steering wheel repeatedly until both total and trip mileage are displayed. Press upper left hand button on the left side of the steering wheel repeatedly until the service symbol and the mileage remaining are displayed. Press and hold "R" button on right side of the gauge cluster until "DO YOU WANT TO RESET THE SERVICE INTERVAL? CONFIRM BY PRESSING THE R BUTTON" is displayed. Within 4 seconds, press and hold "R" button again until the interval is reset. Turn the ignition off.
CLK	1998-1999	Turn the ignition to the "II" position and immediately press "O" button located below "+" and "-" buttons. Turn the ignition to the "O" position. Press and hold "O" button and turn the ignition to the "II" position. When new interval is displayed, release "O" button. Turn the ignition to the "OFF" position.
CLK	1999-2003	Turn the ignition to the "I" position. Press lower left hand button on the left side of the steering wheel repeatedly until both total and trip mileage are displayed. Press upper left hand button on the left side of the steering wheel repeatedly until the service symbol and the mileage remaining are displayed. Press and hold "R" button on left side of the gauge cluster until "DO YOU WANT TO RESET THE SERVICE INTERVAL? CONFIRM BY PRESSING THE R BUTTON" is displayed. Within 4 seconds, press and hold "R" button again until the interval is reset. Turn the ignition off.
CLK	2004-2006	Turn the ignition to the "I" position. Press lower left hand button on the left side of the steering wheel repeatedly until both total and trip mileage are displayed. Press upper left hand button on the left side of the steering wheel repeatedly until the service symbol and the mileage remaining are displayed. Press and hold "R" button on left side of the gauge cluster until "TO RESET, PRESS RESET BUTTON FOR 3 SEC" is displayed. Within 4 seconds, press and hold "R" button again until the interval is reset. Turn the ignition off.
E-Class (210)	1997-1999	Turn the ignition to the "II" position and immediately press "O" button located below "+" and "-" buttons. Turn the ignition to the "O" position. Press and hold "O" button and turn the ignition to the "II" position. When new interval is displayed, release "O" button. Turn the ignition to the "OFF" position.
E-Class (210)	1999-2003	Turn the ignition to the "I" position. Press lower left hand button on the left side of the steering wheel repeatedly until both total and trip mileage are displayed. Press upper left hand button on the left side of the steering wheel repeatedly until the service symbol and the mileage remaining are displayed. Press and hold "R" button on left side of the gauge cluster until "DO YOU WANT TO RESET THE SERVICE INTERVAL? CONFIRM BY PRESSING THE R BUTTON" is displayed. Within 4 seconds, press and hold "R" button again until the interval is reset. Turn the ignition off.
E-Class (211)	2002-8/03	Turn the ignition to the "I" position. Press the down arrow on the left side of the steering wheel repeatedly until service message is displayed. Press and hold button on the left side of the gauge cluster until "SERVICE MENU" is displayed. Press the "-" button on the right side of the steering wheel and select "CONFIRMATION". Press lower left button on the steering wheel and select "CONFIRM". Press that button again and "SERVICE CONFIRMED" is displayed. Press that button repeatedly to return to the main menu.
E-Class (211)	9/03-2006	Turn the ignition to the "I" position. Press lower left hand button on the left side of the steering wheel repeatedly until service mileage is displayed. Press button to the left of the gauge cluster three times. The voltage will be displayed. Press the down arrow button on the left side of the steering wheel until "SERVICE MENU" is displayed. Press the "-" button on the right side of the steering wheel repeatedly and select "CONFIRMATION". Press the lower left button on the left side of the steering wheel. "CONFIRMATION" is displayed. Press that button again. "SERVICE CONFIRMED" is displayed. Press the upper left button on the left side of the steering wheel repeatedly until "SERVICE MENU" is displayed. Press the "-" button on

the right side of the steering wheel repeatedly until "SPECIAL OPERATIONS" is displayed. Press the lower left button on the left side of the steering wheel. Press upper left hand button on the left side of the steering wheel repeatedly until "SERVICE 13" is displayed. Press lower left button on the left side of the steering wheel. Press upper left hand button on the left side of the steering wheel until desired oil grade is selected. Press lower left button on the left side of the steering wheel. Press upper left hand button on the left side of the steering wheel until service message is displayed. Turn the ignition to the "0" position.

G-Class	2002-2006	Turn the ignition to the "ON" position. Press upper left hand button on the left side of the steering wheel repeatedly until both total and trip mileage are displayed. Press the up arrow on the left side of the steering wheel repeatedly until the service symbol and the mileage remaining are displayed. Press and hold the "R" button on the left of the gauge cluster until "DO YOU WANT TO RESET THE SERVICE INTERVAL? CONFIRM BY PRESSING THE R BUTTON" is displayed. Within 4 seconds, press and hold "R" button again until the interval is reset. Turn the ignition off.
M-Class	1998-2005	Turn the ignition to the "II" position and immediately press button to the bottom left of the speedometer twice within a second. Turn the ignition to the "0" position. Press and hold the same button while turning the ignition to the "II" position. Once the new interval is displayed, release button. Turn the ignition off.
S-Class (140)	1997-1999	Turn the ignition to the "II" position and immediately press button to the bottom left of the speedometer twice within a second. Turn the ignition to the "0" position. Press and hold the same button while turning the ignition to the "II" position. Once the new interval is displayed, release button. Turn the ignition off.
S-Class (220)	1999-2006	Turn the ignition to the "I" position. Press lower left hand button on the left side of the steering wheel repeatedly until both total and trip mileage are displayed. Press upper left hand button on the left side of the steering wheel repeatedly until the service symbol and the mileage remaining are displayed. Press and hold "R" button on right side of the gauge cluster until "DO YOU WANT TO RESET THE SERVICE INTERVAL? CONFIRM BY PRESSING THE R BUTTON" is displayed. Within 4 seconds, press and hold "R" button again until the interval is reset. Turn the ignition off.
SL-Class	1997-2002	Turn the ignition to the "II" position and immediately press button to the bottom left of the speedometer twice within a second. Turn the ignition to the "0" position. Press and hold the same button while turning the ignition to the "II" position. Once the new interval is displayed, release button. Turn the ignition off.
SL-Class	2003-2006	Turn the ignition to the "I" position. Press lower left hand button on the left side of the steering wheel repeatedly until both total and trip mileage are displayed. Press upper left hand button on the left side of the steering wheel repeatedly until the service symbol and the mileage remaining are displayed. Press and hold "R" button on right side of the gauge cluster until "DO YOU WANT TO RESET THE SERVICE INTERVAL? CONFIRM BY PRESSING THE R BUTTON" is displayed. Within 4 seconds, press and hold "R" button again until the interval is reset. Turn the ignition off.
SLK	1999-2004	Turn the ignition to the "II" position and immediately press button to the bottom left of the speedometer twice within a second. Turn the ignition to the "0" position. Press and hold the same button while turning the ignition to the "II" position. Once the new interval is displayed, release button. Turn the ignition off.
SLK	2005-2006	Turn the ignition to the "I" position. Press upper left hand button on the left side of the steering wheel until service message is displayed. Press bottom button on left side of the gauge cluster three times. The voltage is displayed. Press the down arrow on the left hand side of the steering wheel until "SERVICE MENU" is displayed. Press either of the right hand buttons on the right side of the steering wheel to select confirmation. Press lower left hand button on the left side of the steering wheel. "CONFIRMATION" is displayed. "Overall service" menu is highlighted. Press that button again. "SERVICE CONFIRMED" is displayed. Press upper left hand button on the left side of the steering wheel repeatedly until "SERVICE MENU" is displayed. Press either of the right hand buttons on the right side of the steering wheel repeatedly until "SPECIAL OPERATIONS" is displayed. Press lower left hand button on the left side of the steering wheel. Press either of the right hand buttons on the right side of the steering wheel until

"SERVICE 3" is displayed. Press lower left hand button on the left side of the steering wheel. Press either of the right hand buttons on the right side of the steering wheel to select oil grade. Press lower left hand button on the left side of the steering wheel. Press upper left hand button on the left side of the steering wheel until service message is displayed. Turn the ignition to the "0" position.

Mercury

- Mariner 2005-2006 Turn ignition to the "ON" position. Press "SET" button until "PRESS SET FOR SYS CHECK" is displayed. Press button again. "OIL CHANGE XXX% HOLD SET NEW" is displayed. Press and hold button until "OIL CHANGE SET TO 100%" is displayed. Turn ignition off.
- Montego 2005-2006 With DIC: (If "CHANGE OIL SOON" or "OIL CHANGE REQUIRED" is displayed.) Turn ignition to the "ON" position. Press middle button on right side of steering wheel until "OIL LIFE XX% RESET IF NEW" is displayed. Press bottom button on right side of steering wheel. Press and hold bottom button until "OIL LIFE IS RESET TO 100%" is displayed. Turn ignition off.
 With DIC: (If "CHANGE OIL SOON" or "OIL CHANGE REQUIRED" is **NOT** displayed.) Turn ignition to the "ON" position. Press middle button on right side of steering wheel until "PRESS RESET FOR SYS CHECK" is displayed. Press bottom button on right side of steering wheel. Press and hold bottom button until "IF NEW OIL HOLD RESET" is displayed. Press and hold bottom button until "OIL LIFE SET TO 100%" is displayed. Turn ignition off.
 Without DIC: Turn ignition to the "ON" position. Press button below speedometer until "OIL LIFE XX%" is displayed. Press and hold button until "OIL LIFE 100%" is displayed. Press button until odometer is displayed again.
- Mountaineer 1997-2001 Turn the ignition to the "ON" position. Press and hold "OIL CHANGE RESET" button until new oil life percentage is displayed.
- Mountaineer 2002-2006 Turn ignition to the "ON" position. Press "SETUP" button. Press "RESET" button. "OIL LIFE XX% HOLD RESET NEW" is displayed. Press and hold "RESET" button until "IF NEW OIL HOLD RESET" is displayed. Press and hold "RESET" button until "OIL LIFE RESET TO 100%" is displayed.

Mini

- Cooper 2002-2006 Turn the ignition to the "OFF" position. Press and hold button on the speedometer. Turn the ignition to the "I" position. "OIL SERVICE" or "INSPECTION" are displayed with "RESET" or "RE". Release button. Press and hold button again. Release when the message begins to flash. The new interval is now displayed. Press button again. "END SIA" is displayed. Turn ignition off.

Oldsmobile

- Alero 1999-2004 With DIC: Turn ignition to the "ON" position. Press "MODE" button repeatedly until oil life is displayed. Press and hold "RESET" for 5 seconds.
 Without DIC: Turn ignition to the "ON" position. Slowly depress accelerator pedal 3 times within 5 seconds. "CHANGE OIL SOON" lamp will flash. Turn ignition off. Start engine. Oil life will display 100%.
- Aurora 1995-2003 With DIC: Turn ignition to the "ON" position. Press "MODE" button repeatedly until oil life is displayed. Press and hold "RESET" for 5 seconds.
 Without DIC: Turn ignition to the "ON" position. Slowly depress accelerator pedal 3 times within 5 seconds. "CHANGE OIL SOON" lamp will flash. Turn ignition off. Start engine. Oil life will display 100%.
- Bravada 2002-2004 Turn ignition to the "ON" position. Slowly depress accelerator pedal 3 times within 5 seconds. "CHANGE ENGINE OIL" lamp will flash. Turn ignition off. Start engine. Oil life will display 100%.
 With DIC: Turn ignition to the "ON" position. Press "FUEL INFORMATION" button repeatedly until "OIL LIFE" is displayed. Press and hold button with the arrow pointing left until "100%" is displayed.
- Eighty Eight 1994-1999 With DIC: Turn ignition to the "ON" position. Press "MODE" button repeatedly until oil life is displayed. Press and hold "RESET" for 5 seconds.
 Without DIC: Turn ignition to the "ON" position. Slowly depress accelerator pedal 3 times within 5 seconds. "CHANGE OIL SOON" lamp will flash. Turn ignition off. Start engine. Oil life will display 100%.

Intrigue	1998-2000	Turn ignition to the "ON" position. Slowly depress accelerator pedal 3 times within 5 seconds. "CHANGE ENGINE OIL" lamp will flash. Turn ignition off. Start engine. Oil life will display 100%.
LSS	1996-1999	With DIC: Turn ignition to the "ON" position. Press "MODE" button repeatedly until oil life is displayed. Press and hold "RESET" for 5 seconds. Without DIC: Turn ignition to the "ON" position. Slowly depress accelerator pedal 3 times within 5 seconds. "CHANGE OIL SOON" lamp will flash. Turn ignition off. Start engine. Oil life will display 100%.
Ninety Eight	1994-1998	With DIC: Turn ignition to the "ON" position. Press "MODE" button repeatedly until oil life is displayed. Press and hold "RESET" for 5 seconds. Without DIC: Turn ignition to the "ON" position. Slowly depress accelerator pedal 3 times within 5 seconds. "CHANGE OIL SOON" lamp will flash. Turn ignition off. Start engine. Oil life will display 100%.
Silhouette	2000	Turn ignition to the "ON" position. Slowly depress accelerator pedal 3 times within 5 seconds. "CHANGE ENGINE OIL" lamp will flash. Turn ignition off. Start engine. Oil life will display 100%.
Silhouette	2001-2004	Turn the ignition to the "ON" position. Press button to the right of the temperature gauge repeatedly until "OIL" is displayed. Press and hold button until "OIL 100" is displayed. Turn ignition off.
Pontiac		
Aztek	2001-2006	With DIC: Turn ignition to the "ON" position. Press the "MODE" button repeatedly until "OIL LIFE LEFT/HOLD SET TO RESET" is displayed. Press and hold "SET" button until "100%" is displayed. "CHANGE ENGINE OIL" will no longer be displayed and a chime will sound. Turn ignition off. Without DIC: Turn ignition to the "ON" position. With "CHANGE ENGINE OIL" lamp on, slowly depress accelerator pedal 3 times within 5 seconds. Turn ignition off.
Bonneville	1996-1997	Turn the ignition to the "ON" position. Press the "MODE" button repeatedly until "OIL LIFE" is displayed. Press and hold "RESET" button until "RESET" and "OIL LIFE 100%" are displayed. Turn ignition off.
Bonneville	1998	Turn the ignition to the "ON" position. Press the "TRIP" button repeatedly until "OIL LIFE" is displayed. Press and hold "RESET" button until "OIL LIFE 100%" is displayed. Turn ignition off.
Bonneville	1999	Turn the ignition to the "ON" position. Press and hold "RESET" button located inside instrument panel storage compartment until "CHANGE OIL SOON" lamp flashes 4 times. Turn ignition off.
Bonneville	2000-2006	Turn the ignition to the "ON" position. Press the "MODE" button repeatedly until "VEHICLE DATA" is displayed. Press "SELECT" button repeatedly until "OIL LIFE" is displayed. Turn ignition off. Press and hold "RESET" button for 5 seconds.
Firebird	1999-2002	Turn the ignition to the "ON" position. Press and hold "TRIP/OIL RESET" button until "OIL CHANGE" lamp stops flashing and turns off. Turn ignition off.
G6	2005-2006	Turn the ignition to the "ON" position. Press the "MENU" button repeatedly until "OIL LIFE" is displayed. Press and hold the "ENTER" button until "ACKNOWLEDGED" is displayed. Turn ignition off.
Grand Am	1999	Turn the ignition to the "ON" position. Press the "RESET" button. The "CHANGE ENGINE OIL" light will flash. Press and hold "RESET" button until "CHANGE ENGINE OIL" light turns off. Turn ignition off.
Grand Am	2000-2003	Turn the ignition to the "ON" position. Press the "RESET" button inside the driver's side fuse panel. The "CHANGE ENGINE OIL" light will flash. Press and hold "RESET" button until "CHANGE ENGINE OIL" light turns off. Turn ignition off.
Grand Am	2004-2006	Turn the ignition to the "ON" position. Slowly depress the accelerator pedal 3 times within 5 seconds. The "CHANGE ENGINE OIL" light will turn off. Turn ignition off.
Grand Prix	1997-2003	With Trip Computer: Turn the ignition to the "ON" position. Press the "MODE" button repeatedly until "OIL LIFE" is displayed. Press and hold "RESET" button until "OIL LIFE 100%" is displayed. Turn ignition off.

With DIC: Turn the ignition to the "ON" position. Slowly depress the accelerator pedal 3 times within 5 seconds. The "CHANGE ENGINE OIL" light will flash. Turn the ignition off. Start engine.

- Grand Prix 2004-2006 Turn the ignition to the "ON" position. Press the "i" button repeatedly until "ENGINE OIL MONITOR" is displayed. Press button with the arrow pointing left repeatedly until oil life display is reset. Turn ignition off.
- GTO 2004-2006 Turn the ignition to the "ON" position. Slowly depress the accelerator pedal 3 times within 5 seconds. Turn ignition off. Start engine.
- Montana 2004-2006 Turn the ignition to the "ON" position. Press button to the right of the temperature gauge repeatedly until "OIL" is displayed. Press and hold button until "OIL LIFE 100%" is displayed. Turn ignition off.

Saab

- 9-3 2003-2006 Turn the ignition to the "ON" position. Depress the brake pedal and hold it down. Press the second rectangular button from the top on the right hand side of the gauge cluster. Turn the knob above that button until "SYSTEM SETTINGS" is displayed. Press the knob button. Turn the knob until "SERVICE INFO" is displayed. Press the knob button. "% LEFT OF OIL QUALITY/DAYS TO SERVICE" is displayed. Turn the knob until "RESET SERVICE IND." is displayed. Press the knob button. "ARE YOU SURE? YES OR NO" is displayed. Turn the knob and select "YES". Press the knob button. "SERVICE PARAMETERS UPDATED" is displayed. Turn ignition off.
- 9-5 1999-2006 Turn the ignition to the "ON" position. Press "CLR" or "CLEAR" button. Press and hold button until "SERVICE" is displayed. Turn ignition off.
- 9-7X 2005-2006 Turn the ignition to the "ON" position. Press the button with the gas pump repeatedly until "ENGINE OIL LIFE" is displayed. Press and hold the button with the arrow pointing left until "OIL LIFE RESET" is displayed. Turn ignition off.

Saturn

- ION 2003-2006 Turn the ignition to the "ON" position. Press button between the speedometer and tachometer one or two times to display "OIL LIFE" flashing. Press and hold button until "OIL LIFE" remains displayed but not flashing. Turn the ignition off. Turn ignition to the "ON" position. If "CNG OIL" is displayed, repeat procedure.
- L-Series 2000-2003 Turn the ignition to the "ON" position. Press and hold "RESET" button located inside the fuse box under the hood for 5 seconds. "CHANGE OIL SOON" message will flash for 30 seconds. Turn ignition off. Turn the ignition to the "ON" position. If "CHANGE OIL SOON" is displayed, repeat procedure.
- L-Series 2004-2006 Turn the ignition to the "ON" position. Slowly depress the accelerator pedal 3 times within 5 seconds. "CHANGE OIL SOON" message will flash. Turn ignition off.
- Relay 2005-2006 Turn the ignition to the "ON" position. Press the button with the arrow pointing left repeatedly until "OIL" is displayed. Press and hold the button until "100%" is displayed. Turn ignition off.
- S-Series 2000-2002 Turn the ignition to the "ON" position. Press and hold "OIL-R" button located inside the fuse box under the hood for 5 seconds. "CHANGE OIL SOON" message will flash for 30 seconds. Turn ignition off. Turn the ignition to the "ON" position. If "CHANGE OIL SOON" is displayed, repeat procedure.
- VUE 2003 Turn the ignition to the "ON" position. Press and hold "RESET" button located inside the fuse box under the hood for 5 seconds. "CHANGE OIL SOON" message will flash for 30 seconds. Turn ignition off. Turn the ignition to the "ON" position. If "CHANGE OIL SOON" is displayed, repeat procedure.
- VUE 2004-2006 Turn the ignition to the "ON" position. Slowly depress the accelerator pedal 3 times within 5 seconds. "CHANGE OIL SOON" message will flash. Turn ignition off.

Scion

tC	2005-2006	Turn the ignition to the "ON" position. Press and hold "TRIP" button until "000000" is displayed. Turn ignition off.
xA	2004-2006	Turn the ignition to the "ON" position. Press and hold "TRIP" button until "000000" is displayed. Turn ignition off.
xB	2004-2006	Turn the ignition to the "ON" position. Press and hold "TRIP" button until "000000" is displayed. Turn ignition off.

Toyota

4Runner	2003-2006	With the ignition "OFF", press and hold "RESET" button. Turn ignition to the "ON" position. Continue to hold button until "MAINT REQD" light turns off. Turn ignition off.
Camry	2004-2006	With the ignition "OFF", press and hold button below the speedometer. Turn ignition to the "ON" position. Continue to hold button until "000000" is displayed and the "MAINT REQD" lamp turns off. Turn ignition off.
Highlander	2004-2006	With the ignition "OFF", press and hold button below the speedometer. Turn ignition to the "ON" position. Continue to hold button until "000000" is displayed and the "MAINT REQD" lamp turns off. Turn ignition off.
Matrix	2004-2006	With the ignition "OFF", press and hold button below the speedometer. Turn ignition to the "ON" position. Continue to hold button until "000000" is displayed and the "MAINT REQD" lamp turns off. Turn ignition off.
Prius	2004-2006	With the "POWER" switch off, press and hold "ODO TRIP" button. Press "POWER" switch twice selecting "IG-ON". Continue to hold button until "000000" is displayed and "MAINT REQD" light turns off. Turn "POWER" switch to off.
RAV4	2004-2006	With the ignition "OFF", press and hold button below the speedometer. Turn ignition to the "ON" position. Continue to hold button until "000000" is displayed and the "MAINT REQD" lamp turns off. Turn ignition off.
Sequoia	2004-2006	With the ignition "OFF", press and hold button below the speedometer. Turn ignition to the "ON" position. Continue to hold button until "000000" is displayed and the "MAINT REQD" lamp turns off. Turn ignition off.
Sienna	2004-2006	With the ignition "OFF", press and hold button to the right of the speedometer. Turn ignition to the "ON" position. Continue to hold button until "000000" is displayed and the "MAINT REQD" lamp turns off. Turn ignition off.
Solara	2004-2006	With the ignition "OFF", press and hold button to the left of the speedometer. Turn ignition to the "ON" position. Continue to hold button until "000000" is displayed and the "MAINT REQD" lamp turns off. Turn ignition off.
Tacoma	2005-2006	With the ignition "OFF", press and hold button to the right of the speedometer. Turn ignition to the "ON" position. Continue to hold button until "000000" is displayed and the "MAINT REQD" lamp turns off. Turn ignition off.
Tundra	2003-2006	With the ignition "OFF", press and hold button below the speedometer. Turn ignition to the "ON" position. Continue to hold button until "000000" is displayed and the "MAINT REQD" lamp turns off. Turn ignition off.

Volkswagen

EuroVan	1998-2003	With the ignition "OFF", press and hold button below the speedometer. Turn the ignition to the "ON" position. Release button. "SERVICE OIL" is displayed. Turn button below the tachometer to the right until "SERVICE ---" is displayed. Turn ignition off.
Golf	1994-1995	Turn the ignition to the "ON" position. Press and hold button below the speedometer. Turn ignition off. Release button. "OEL" is displayed. Press button below the tachometer repeatedly until "----" is displayed. Turn ignition to the "ON" position. "IN00" is displayed. Turn ignition off.
Golf	2000-2005	Longlife service intervals require diagnostic tool. Fixed intervals: Press and hold button below the speedometer. Turn ignition to the "ON" position. "SERVICE" is displayed. Release button. Turn button below the tachometer to the right until display is reset. Turn ignition off.
Jetta	1994-1995	Turn the ignition to the "ON" position. Press and hold button below the speedometer. Turn ignition off. Release button. "OEL" is displayed. Press button below the tachometer repeatedly until "----" is displayed. Turn ignition to the "ON" position. "IN00" is displayed. Turn ignition off.
Jetta	2000-2004	Longlife service intervals require diagnostic tool. Fixed intervals: Press and hold button below the speedometer. Turn ignition to the "ON" position.

		"SERVICE" is displayed. Release button. Turn button below the tachometer to the right until display is reset. Turn ignition off.
New Beetle	2000-2006	Longlife service intervals require diagnostic tool. Fixed intervals: Press and hold button below the speedometer. Turn ignition to the "ON" position. Release button. "SERVICE" is displayed. Press and hold button again until "SERVICE" is no longer displayed. Turn ignition off.
Passat	2000-2006	Longlife service intervals require diagnostic tool. Fixed intervals: Press and hold button below the speedometer. Turn ignition to the "ON" position. "SERVICE" is displayed. Release button. Turn button below the tachometer to the right until display is reset. Turn ignition off.
Phaeton	2004-2006	Requires diagnostic tool.
Touareg	2004-2006	Requires diagnostic tool.
Volvo		
850	1994-1996	With odometer below speedometer needle: Turn ignition to the "ON" position. Connect lead to terminal 7 on diagnostic terminal. Press button near lead 4 times. LED is illuminated and ready. Press button once. When LED illuminates, press button 5 times. When LED illuminates press button once. LED will flash. Turn ignition off. With odometer above speedometer needle: Remove grommet from instrument panel. Turn ignition to the "ON" position. Press button behind grommet. Turn ignition off.
850	1996-1997	Requires diagnostic tool.
940	1994-1995	Remove grommet from instrument panel. Turn ignition to the "ON" position. Press button behind grommet. Turn ignition off.
960	1994-1995	Remove grommet from instrument panel. Turn ignition to the "ON" position. Press button behind grommet. Turn ignition off.
960	1996-1997	Requires diagnostic tool.
C70	1998-2004	With ignition "OFF", press and hold button to the right of the speedometer. Turn ignition to the "ON" position. Release button when service interval light begins to flash. Turn ignition off.
S40	2000-2002	With ignition "OFF", press and hold button below the speedometer. Turn ignition to the "ON" position. Release button when service interval light flashes. Turn ignition off.
S40	2003-2004	With ignition "OFF", press and hold button between the speedometer and the tachometer. Turn ignition to the "ON" position. Release button when service interval light flashes. Turn ignition off.
S40	2005-2006	All doors must be closed. Turn the ignition to the "I" position. Press and hold button below the speedometer. Within 2 seconds, turn ignition to the "II" position. Release button when yellow warning light lights up. Turn ignition off.
S60	2000-2001	Turn the ignition to the "I" position. Press and hold button below the speedometer. Turn the ignition to the "ON" position. Release button when service interval light flashes. Turn ignition off.
S60	2001-2006	Turn the ignition to the "I" position. Press and hold button below the speedometer. Turn the ignition to the "ON" position. Release button when service message has been reset. Turn ignition off.
S70	1998-2000	With ignition "OFF", press and hold button to the right of the speedometer. Turn ignition to the "ON" position. Release button when service interval light begins to flash. Turn ignition off.
S80	1999-2001	Turn the ignition to the "I" position. Press and hold button below the speedometer. Turn the ignition to the "ON" position. Release button when service interval light flashes. Turn ignition off.
S80	2001-2006	Turn the ignition to the "I" position. Press and hold button below the speedometer. Turn the ignition to the "ON" position. Release button when service message has been reset. Turn ignition off.
S90	1997-1998	Requires diagnostic tool.

V40	2000-2002	With ignition "OFF", press and hold button below the speedometer. Turn ignition to the "ON" position. Release button when service interval light flashes. Turn ignition off.
V40	2003-2004	With ignition "OFF", press and hold button between the speedometer and the tachometer. Turn ignition to the "ON" position. Release button when service interval light flashes. Turn ignition off.
V50	2005-2006	All doors must be closed. Turn ignition to the "I" position. Press and hold button below the speedometer. Within 2 seconds, turn ignition to the "II" position. Release button when yellow warning light lights up. Turn ignition off.
V70	1998-2000	With ignition "OFF", press and hold button to the right of the speedometer. Turn ignition to the "ON" position. Release button when service interval light begins to flash. Turn ignition off.
V70	2000-2001	Turn the ignition to the "I" position. Press and hold button below the speedometer. Turn the ignition to the "ON" position. Release button when service interval light flashes. Turn ignition off.
V70	2001-2006	Turn the ignition to the "I" position. Press and hold button below the speedometer. Turn the ignition to the "ON" position. Release button when service message has been reset. Turn ignition off.
V90	1997-1998	Requires diagnostic tool.
XC70	2001-2006	Turn the ignition to the "I" position. Press and hold button below the speedometer. Turn the ignition to the "ON" position. Release button when service message has been reset. Turn ignition off.
XC90	2002-2006	Turn the ignition to the "I" position. Press and hold button below the speedometer. Turn the ignition to the "ON" position. Release button when service message has been reset. Turn ignition off.