
Automotive Wiring And Wire RepairChapter 6

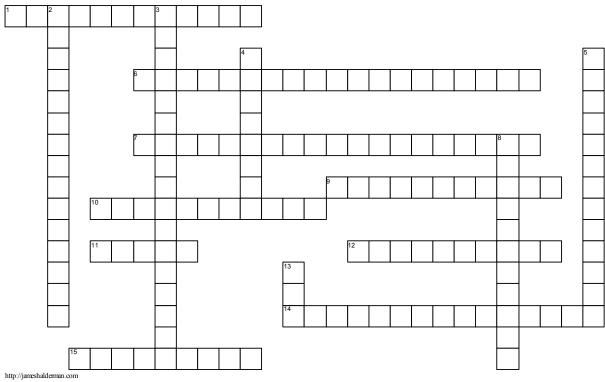

ACROSS

| | large damps attached and are used to connect a vehicle |
|----|------------------------------------------------------------|
| | that has a discharged battery to a vehicle that has a good |
| | battery. |
| 6 | are uninsulated. |
| 7 | are used to protect wiring from a |
| | direct short-to-ground. |
| 9 | Most automotive wire, except for spark plug wire, is often |
| | called because it is designated to operate |
| | at or near battery voltage. |
| 10 | A is a type of fuse that consists of a short |
| | length of standard copper-strand wire covered with a |
| | special nonflammable insulation. |
| 11 | should be used in every circuit to protect the wiring |
| | from overheating and damage caused by excessive |
| | current flow as a result of a short circuit or other |
| | malfunction. |
| 12 | The is the term used to describe how high- |
| | frequency AC electricity flows through a conductor. |
| 14 | are mechanical units made of two |
| | different metals that deform when heated and open a set |
| | of contact points that work in the same manner as an "off" |
| | switch. |
| 15 | The term usually refers to the plastic portion |
| | that snaps or connects together, thereby making the |

mechanical connection.

1 _____ are 4 to 2/0 gauge electrical cables with

DOWN

| 2 | Most manufacturers indicate on the wiring diagrams the |
|---|----------------------------------------------------------|
| | sizes measured in square millimeters |
| | of cross-sectional area. |
| 3 | Wiring is sized and purchased according to gauge size as |
| | assigned by the system. |
| 4 | A is a metal fastener attached to the end of a |
| | wire, which makes the electrical connection. |
| 5 | are the largest wires used in the |
| | automotive electrical system. |
| 8 | A is used to transmit low-voltage signals |
| | using two wires that are twisted together. |
| 3 | circuit protectors are solid state. |
| | |