## Temperature Sensors Chapter 15

	1																									2			
					1				1	1		1	1	1	1	1	_				-	-		-					ш
		3															4						,						
									5																				6
			_																										
	7	.	4							8	_					_								1					
			4																										$\vdash$
		_	_							9	Г	Т				T													
		-	-							L						<u> </u>													
		10	+	1								Τ				I						]							
											<u> </u>											J							$\blacksquare$
			_																								-		
			1		11																								
												<u> </u>							l	l	<u> </u>	<u> </u>			I				
									12																				
							13																						
	14			1	1 1				_	1		_	1		_	1			ı						1			1	
									15	1	г	<del></del>	1	Г	Г	1					Г					Π			
										ļ	<u> </u>																		$\vdash$
	http:/	/jamesh	aldem	nan.com	1													J											Ш
AC	ROSS															of t	he fu	el.						ser	nsor i	sa N	TCth	emi	stor
1. Songare that have you high							10 A P0113 DTC indicates						-	13 sensors are used on many										that can be located in the air cleaner housing.					
<ol> <li>Sensors that have very high resistance when cold and</li> </ol>							11 Some engines use a							GM vehicles and are used								3		Some vehicle					
	low resistance when hot are							enr to	o sense the					as an input to the oil life monitoring system.									ma	manufacturers use a to effectively					
				g u			temperature of the air							<b>14</b> The								broaden the range of the							
5	5 An IAT installed in the						entering the engine, instead of an IAT.  12 Many Ford vehicles that are						d	sensor is an important sensor for the								4	ECT sensor. 4 Computer-equipped vehicles use ansensor. 6 The VWGolf is an example						
isthe														proper operation of the															
		most likely to suffer damage equipped with an electronic due to an engine backfire. returnless type of fuel									ز	automatic transmission. <b>15</b> A P0117 DTC indicates								6									
8	8 Toyota engines are equipped with heavy-duty,							injection use an sensor to																	a veh				
glass-encapsulated							give the PCM information							DOWN								sensors.							
9	9 A P0118 DTC indicates							_	ardin	g the		•			9	2 The								7 A P0112 DTC indicates					