
Tire-Pressure Monitoring System Chapter 114

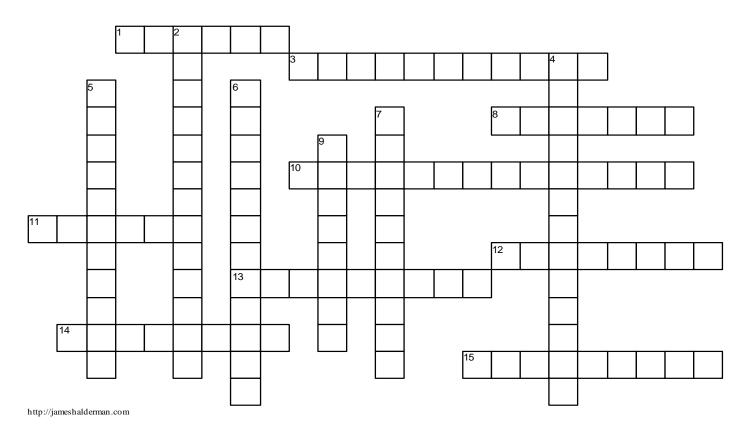

ACROSS

1	When a vehicle turns a corner, the outside wheels $% \left(1\right) =\left(1\right) \left($
	faster than the inside wheels.
3	New tire-pressure warning sensors are shipped in
	·
8	Another name for initialization is
10	After checking that all four tires are the same size
	and condition, the system may require
	·
11	tire pressure monitoring systems use a
	pressure sensor in each wheel that detects and
	transmits the tire pressure to a TPMS controller.
12	The requires that all vehicles be
	equipped with a tire-pressure monitoring system
	that will warn the driver in the event of an
	underinflated tire.
13	is when the vehicle is stopped, the
	sensor "goes to sleep" to help improve battery life.
14	If a vehicle has an tire valve stem, it is
	equipped with a direct tire pressure monitoring
	system.
15	is triggered if a rapid change in
	inflation pressure is detected.

DOWN

2	A replacement TPMS transmitter has an 8-digit
_	number, called the, on each
	valve/transmitter assembly.
1	The method is when it is
•	required lowering the inflation pressure by 5 to 10
	PSI.
_	
5	The term inflation pressure is used
	in service information to indicate the specified tire
	inflation pressure.
6	A monitoring system is a system
	that detects a tire that has low inflation pressure
	and warns the driver.
7	is when the sensor inside detects
	that the vehicle is traveling above 20 mph.
9	tire pressure monitoring systems do not
	measure the actual tire pressure.

