
Immobilizer Systems Chapter 59

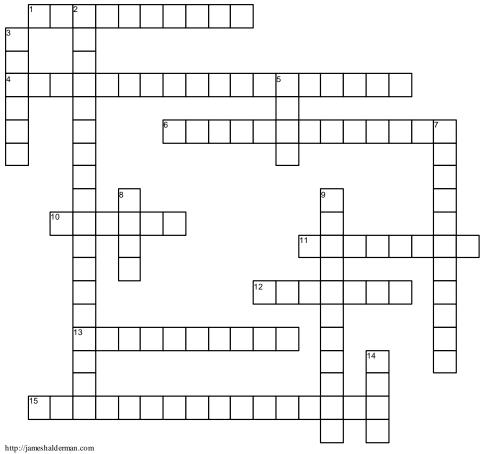

Δ	CR	0	9	C
				-

1	in mode a rault with the security system
	occurs when the vehicle is running, the security light
	remains on, but the immobilizer system is disabled.
4	The part of the key fob does
	not require a battery to function.
6	The includes a self-test and flashes
	a few times, then goes out.
0	A is the object that is a decoration on a key
	ring and usually contains a transmitter used to unlock
	a vehicle.
11	truck systems use a Hall-effect sensor and
	magnets in the lock cylinder with a conventional $\ensuremath{\text{key}}.$
12	Newer systems include the 1 and Passkey 2
	which use a resistor pellet in the ignition key.
13	In the security lamp flashes about once
	per second if the system detects a bad key, lock
	cy linder, or security -related wiring problem.
15	Ford uses a responder key for their antitheft system.
	which is called System (PATS).

DOWN

2	prevent the vehicle from being
	started if the correct ignition key is not used.
3	In mode the security dash lamp comes on for
	2 to 5 seconds for a bulb check when the ignition is
	turned on, then goes out.
5	In's the onboard computer sends out an RF
	signal that is read by the electronic transponder chip
	embedded in the key. The transponder returns a
	unique signal back to the SKIM.
7	A is inside the vehicle and receives the
	signal transmitted by the transponder in the key.
8	Most security systems today use a security
	system.
9	The is mounted in the key or the body
	of the key fob. It has an antenna, which consist of a
	coil of wire as well as a circuit board.
4	The abbreviation for Vehicle Antitheft System used by
	General Motors is

