

Name: \_\_\_\_\_ Date: \_\_\_\_\_

1. In most recent-model vehicles, the horn button is an input to the \_\_\_\_\_.
  - A. Horn relay
  - B. Instrument cluster
  - C. BCM
  - D. Garage door opener
  
2. How do rain-sense wipers primarily function?
  - A. By detecting the weight of water on the wipers
  - B. By using a water detection module attached to the inside of the windshield
  - C. By measuring the opacity of the windshield
  - D. By using ultrasonic sensors
  
3. What should be used during module reprogramming to maintain the vehicle voltage level?
  - A. A 24-volt battery
  - B. A memory saver
  - C. A charger that outputs clean DC voltage
  - D. Any of the above
  
4. Which component is responsible for moving the heated or cooled air in heated and cooled seats?
  - A. Peltier elements
  - B. Climate control fan
  - C. Thermistor
  - D. Radiator
  
5. How do power door locks primarily function?
  - A. Using hydraulic systems
  - B. Using electrical circuits and actuators
  - C. Using mechanical levers
  - D. Using pneumatic systems
  
6. What is meant by a "rolling code" in the context of body electrical accessories?
  - A. A code that changes with every use for security
  - B. A code that is consistent and never changes
  - C. A code that is based on the vehicle's speed
  - D. A code that is used for diagnostics
  
7. How do cruise controls on vehicles with electronic throttle control (ETC) systems function?
  - A. Using a servo to move the throttle
  - B. Using a mechanical linkage
  - C. Using a hydraulic system
  - D. Using an electronic signal to adjust throttle position

8. How is the temperature of heated seats primarily regulated?
- A. Using a thermostat
  - B. Using a variable resistor in the seat cushion
  - C. Using an external temperature sensor
  - D. Using the vehicle's AC system
9. What is the primary purpose of the fan in heated and cooled seats?
- A. To inflate the seat cushion
  - B. To provide ventilation
  - C. To move the heated or cooled air to heat or cool the seat
  - D. To dry the seat material
10. Which of the following is NOT a condition for the keyless remote start to work?
- A. The keyless remote is inside the vehicle
  - B. The gearshift lever is in the "P" (Park) position
  - C. The engine hood is closed
  - D. The ignition key is removed from the ignition switch

Automotive Technology 7th Edition

Chapter 57

Multiple Choice Quiz B

Answer Key

1. C

2. B

3. D

4. B

5. C

6. A

7. A

8. B

9. C

10. A