


Circuit Testers and Digital Meters

Chapter 22

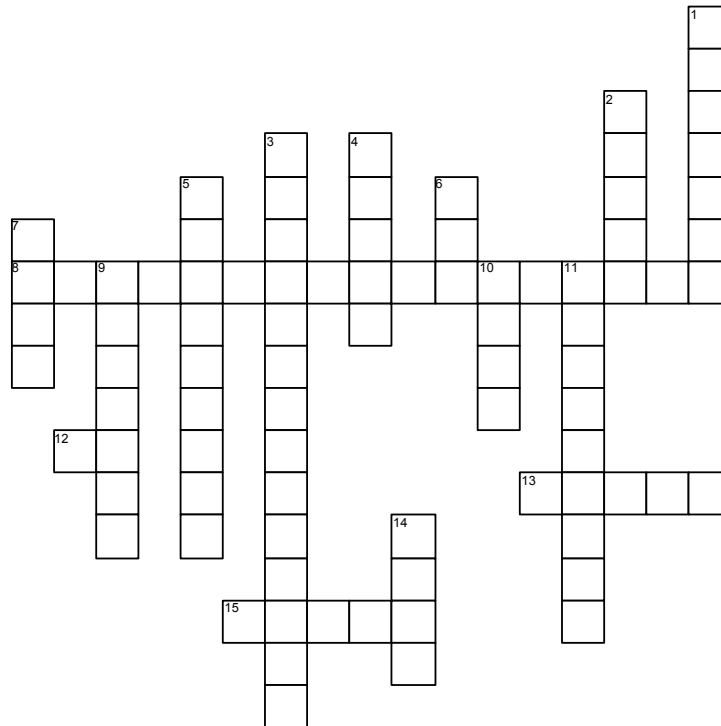

<http://jameshaldeman.com>

ACROSS

- 8 _____ do not make physical contact with the circuit.
- 12 ___ is symbolized on a DVOM meaning overload or over limit.
- 13 _____ = 1/1,000
- 15 _____ uses the symbol μ

DOWN

- 1 _____ is the setting used to test some computer sensors and to check for unwanted AC voltage from alternators.
- 2 The _____ is automatically set for most meters but can be manually adjusted if needed.
- 3 _____ on the ends allow the fused jumper wire to be clipped to a ground or power source while the other end is attached to the power side or ground side of the unit being tested.
- 4 A typical _____ jumper wire has a blade-type fuse that can be easily replaced.
- 5 The major advantage of the _____ - _____ meter is that there is no need to break the circuit to measure current.
- 6 _____ is a term commonly used to describe a digital meter.
- 7 _____ = 1,000
- 9 _____ is the setting most commonly used for automotive testing.
- 10 _____ = 1,000,000
- 11 A _____ is simply a light bulb with a probe and a ground wire attached.
- 14 _____ is a term commonly used to describe a digital meter.