


Circuit Testers And Digital Meters

Chapter 26

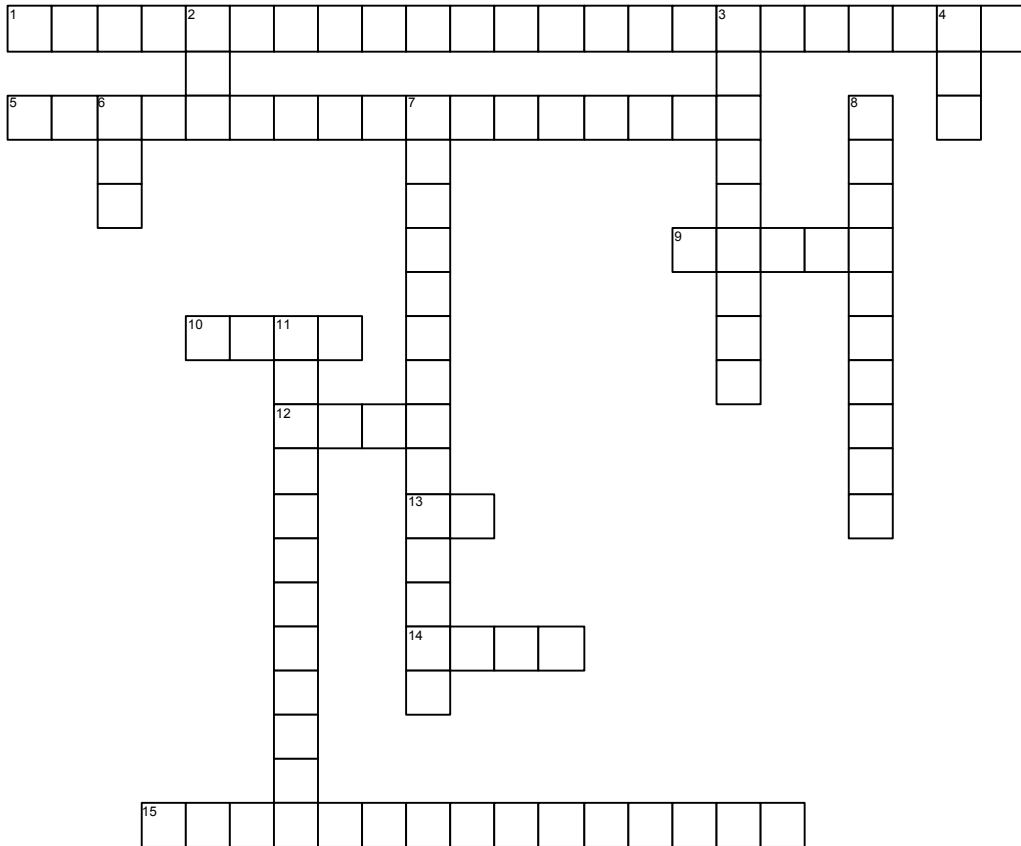

<http://jameshaldeman.com>

ACROSS

- 1 Digital multimeter and digital voltage ohm-meter are terms commonly used for electronic ____ - ____.
- 5 _____ do not make physical contact with the circuit.
- 9 ____ means 1/1,000.
- 10 ____ means 1,000.
- 12 ____ is another term for a high-impedance test meter.
- 13 ____ means over limit or overload.
- 14 ____ means 1,000,000.
- 15 A _____ is similar to a test light but includes a battery for self-power.

DOWN

- 2 The ____ has several categories of voltage standards for meter and meter leads.
- 3 A _____ is simply a light bulb with a probe and a ground wire attached.
- 4 A true sine wave pattern measurement will be the same for both ____ and average reading meters.
- 6 ____ is another term for a high-impedance test meter.
- 7 An ____ / ____ - ____ is a useful meter for automotive diagnostic work.
- 8 A _____ is an electronic device that lights up a red LED if the probe is touched to batter voltage.
- 11 An _____ uses a light-emitting diode instead of a standard automotive bulb for a visual indication of voltage.