A5 BRAKES 6th Edition

Chapter 1 Service Information, Tools, & Safety Opening Your Class

KEY ELEMENT	EXAMPLES
Introduce Content	This course or class covers operation and service of Automotive
	Brakes. It correlates material to task lists specified by ASE and NATEF.
Motivate Learners	Explain how the knowledge of how something works translates into
	the ability to use that knowledge to figure why the engine does not
	work correctly and how this saves diagnosis time, which translates
State the learning	into more money.
State the learning objectives for the chapter	Explain the chapter learning objectives to the students.
or course you are about to	Understand the ASE knowledge content for vehicle
cover and explain this is	identification and the proper use of tools and shop
what they should be able	equipment.
to do as a result of	2. Retrieve vehicle service information.
attending this session or	3. Identify the strength ratings of threaded fasteners.
class.	4. Describe how to safely hoist a vehicle.
	5. Discuss how to safely use hand tools.
	6. Identify the personal protective equipment (PPE) that all
	service technicians should wear.
	7. Describe what tool is the best to use for each job.
	8. Explain the difference between the brand name (trade name)
	and the proper name for tools.
	9. Explain how to maintain hand tools.
	10. Explain HEV Safety.
Establish the Mood or	Provide a WELCOME, Avoid put downs and bad jokes.
Climate	
Complete Essentials	Restrooms, breaks, registration, tests, etc.
Clarify and Establish	Do a round robin of the class by going around the room and having
Knowledge Base	each student give their backgrounds, years of experience, family,
	hobbies, career goals, or anything they want to share.

ICONS	Ch01 Service Information, Tools, & Safety
	1. SLIDE 1 CH1 SERVICE INFORMATION, TOOLS, & SAFETY
	Check for ADDITIONAL VIDEOS & ANIMATIONS @ http://www.jameshalderman.com/ WEB SITE IS CONSTANTLY UPDATED
	2. SLIDE 2 EXPLAIN FIGURE 1.1 Typical vehicle identification number (VIN) as viewed through the windshield.
DEMO	DEMONSTRATION: SHOW STUDENTS AN EXAMPLE OF A VEHICLE IDENTIFICATION NUMBER (VIN) AND HAVE STUDENTS DECIPHER ITS MEANING BASED ON INFORMATION PROVIDED ON PAGE 126 OF ATE4 CHAPTER 16
	Before 1980, there was no universally accepted equivalent to a VIN, so OEMs used their own formats.
	 3. SLIDE 3 EXPLAIN FIGURE 1.2 vehicle emissions control information (VECI) sticker is placed under hood. 4. SLIDE 4 EXPLAIN FIGURE 1.3 A typical calibration code sticker on the case of a controller. The information on the sticker is often needed when ordering parts or a replacement controller.
DEMO	DEMONSTRATE: EXAMPLE OF VEHICLE SAFETY CERTIFICATION LABEL. ASK THEM TO DECIPHER INFORMATION PROVIDED ON LABEL AND EXPLAIN WHAT IT SIGNIFIES.
DEMO	DEMONSTRATE: LOCATION OF VEHICLE EMISSIONS CONTROL INFORMATION (VECI) LABEL UNDER HOOD OF VEHICLE















- **5. SLIDE 5 EXPLAIN FIGURE 1.5** Electronic service information is available from aftermarket sources such as ALLDATA and Mitchell On Demand, as well as on websites hosted by vehicle manufacturers.
- 6. SLIDE 6 EXPLAIN FIGURE 1.6 Technical service bulletins (TSBs) are issued by vehicle manufacturers when a fault occurs that affects many vehicles with the same problem. The TSB then provides the fix for the problem including any parts needed and detailed instructions.

DISCUSSION: ASK STUDENTS TO REVIEW SAMPLES OF VEHICLE OWNER'S MANUALS. ASK STUDENTS TO SPECULATE ABOUT WHY SO FEW OWNERS READ THESE MANUALS HOST DISCUSSION: SERVICE HISTORY

We all have our own service history, as documented in our medical records. How do physicians use medical histories to help patients? How is this similar to an automotive technician diagnosing a problem with an automobile? Use this analogy as basis for class discussion. Use one column on flip chart to show elements of medical history. Use another column for corresponding elements of an automotive service history.

- **7. SLIDE 6 EXPLAIN FIGURE 1.7** The dimensions of a typical bolt showing where sizes are measured.
- **8. SLIDE 6 EXPLAIN FIGURE 1.8** Thread pitch gauge used to measure the pitch of the thread. This bolt has 13 threads to the inch.
- **9. SLIDE 6 EXPLAIN FIGURE 1.9** Bolts and screws have many different heads which determine what tool is needed.
- **10. SLIDE 10 EXPLAIN FIGURE 1.10** The **metric** system specifies fasteners by diameter, length, and pitch

DISCUSSION: talk about differences between unified national coarse (UNC) & unified national fine (UNF) threads. Where might each be found in use on an automobile? Ask students which they think would have better holding power.

VIDEO FROM WWW.MYAUTOMOTIVELAB.COM ON

VIDEO FROM WWW.MYAUTOMOTIVELAB.COM ON BOLT MARKINGS

HTTP://MEDIA.PEARSONCMG.COM/PH/CHET/CHET_MYLABS/AKAMAI/TEMPLATE/VIDEO640X480.PHP?TITLE=BOLT%20MARKIN G&CLIP=PANDC/CHET/2012/AUTOMOTIVE/AUTO_SHOP_SAFETY/CLIP24BOLTMARKINGS1.MOV&CAPTION=CHET/CHET_MYLAB S/AKAMAI/2012/AUTOMOTIVE/AUTO_SHOP_SAFETY/XML/CLIP24BOLTMARKINGS1.XML













DEMONSTRATION: SHOW EXAMPLES OF A VARIETY OF GENERAL BOLTS & SCREWS. DISCUSS WHAT TYPE OF TOOL MUST BE USED WITH EACH. STUDENTS GUESS WHY EXAMPLES ARE, OR ARE NOT USED ON CARS.

- **11. SLIDE 11 EXPLAIN FIGURE 1.11** Stronger threads are created by cold-rolling a heat-treated bolt blank instead of cutting the threads, using a die.
- **12. SLIDE 12 EXPLAIN FIGURE 1.12** Metric bolt (cap screw) grade markings and approximate tensile strength.
- **13. SLIDE 13 EXPLAIN FIGURE 1.13** Nuts come in a variety of styles, including locking (prevailing torque) types, such as distorted thread and nylon insert type.
- **14. SLIDE 14 EXPLAIN FIGURE 1.14** Washers come in a variety of styles, including flat and serrated used to help prevent a fastener from loosening

DEMONSTRATION: SHOW & DEMONSTRATE BOTH AN ENGLISH & METRIC THREAD PITCH GAUGE

- **15. SLIDE 15 EXPLAIN FIGURE 1.15** A wrench after it has been forged but before the flashing, extra material around the wrench, has been removed.
- **16. SLIDE 16 EXPLAIN FIGURE 1.16** A typical open-end wrench. The size is different on each end and notice that head is angled 15 degrees at the end.
- **17. SLIDE 17 EXPLAIN FIGURE 1.17** The end of a boxend wrench is angled 15 degrees to allow clearance for nearby objects or other fasteners.
- **18. SLIDE 18 EXPLAIN FIGURE 1.18** A combination wrench has an open end at one end and a box end at the other end

DEMONSTRATION: AN OPEN-END WRENCH IS ONE OF THE MOST BASIC TOOLS. SHOW STUDENTS WHEN AND WHERE OPEN END WRENCHES ARE USED IN AUTOMOTIVE SERVICE AND REPAIR DEMONSTRATION: SHOW STUDENTS EXAMPLES OF BOX-END, ADJUSTABLE, & LINE WRENCHES, AND DISCUSS WHERE EACH IS USED IN AUTOMOTIVE APPLICATIONS. REMIND STUDENTS OF THE SAFETY PROCEDURES THEY SHOULD FOLLOW WHEN USING ALL TYPES OF WRENCHES.











- **19. SLIDE 19 EXPLAIN FIGURE 1.19** adjustable wrench. Adjustable wrenches are sized by overall length of the wrench and not by how far jaws open. Common sizes of adjustable wrenches include 8, 10, and 12 inch.
- **20. SLIDE 20 EXPLAIN FIGURE 1.20** end of a typical line wrench, which shows that it is capable of grasping most of the head of the fitting.
- 21. SLIDE 21 EXPLAIN FIGURE 1.21 A typical ratchet used to rotate a socket. A ratchet makes a ratcheting noise when it is being rotated in the opposite direction from loosening or tightening. A knob or lever on the ratchet allows the user to switch directions.
- **22. SLIDE 22 EXPLAIN FIGURE 1.22** A typical flex handle used to rotate a socket, also called a breaker bar because it usually has longer handle than a ratchet &, therefore, can be used to apply more torque to a fastener

DEMONSTRATION: SHOW STUDENTS HOW TO USE A RATCHET AND SOCKET SET, AND IDENTIFY AUTOMOTIVE APPLICATIONS WHERE SOCKET WRENCHES ARE BEST USED. EXPLAIN RELEVANCE OF THE DRIVE SIZE TO THE APPLICATION

SHOW ANIMATION: ROUNDED BOLTS WWW.MYAUTOMOTIVELAB.COM

HTTP://MEDIA.PEARSONCMG.COM/PH/CHET/CHET_MYAUTOMOTIVELAB_2/ANIMATIONS/A1_ANIMATION/CHAPTER4_FIG_4_11C/INDEX.HTM

SHOW ANIMATION: 6/12 POINT SOCKETS WWW.MYAUTOMOTIVELAB.COM

HTTP://MEDIA.PEARSONCMG.COM/PH/CHET/CHET_MYAUTOMOTIVELAB_2/ANIMATIONS/A1_ANIMATION/CHAPTER04_FIG_04_11/INDEX.HTM

- **23. SLIDE 23 EXPLAIN FIGURE 1.23** most used socket drive sizes include 1/4, 3/8, and 1/2 inch drive.
- **24. SLIDE 24 EXPLAIN FIGURE 1.24** 6 point socket fits head of a bolt or nut on all sides. 12 point socket can round off head of a bolt or nut if a lot of force is applied.
- **25. SLIDE 25 EXPLAIN FIGURE 1.25** Allows access to nut that has stud plus other locations needing great depth, such as spark plugs.











- **26. SLIDE 26 EXPLAIN FIGURE 1.26** Using clicker-type torque wrench to tighten connecting rod nuts
- 27. SLIDE 27 EXPLAIN FIGURE 1.27 A beam-type torque wrench that displays the torque reading on the face of the dial. The beam display is read as the beam deflects, which is in proportion to the amount of torque applied to the fastener.
- **28. SLIDE 28 EXPLAIN FIGURE 1.28** Torque wrench calibration checker

<u>DEMONSTRATION</u>: SHOW CLICKER TYPE AND BEAM-TYPE TORQUE WRENCHES & DEMONSTRATE HOW TO USE THEM PROPERLY. STRESS IMPORTANCE OF RESETTING TORQUE WRENCHES TO THE LOWEST SETTING (LOWEST SETTING IS NOT ALWAYS "0")

SAFETY WARN STUDENTS TO BE CAREFUL NOT TO OVERTIGHTEN BOLTS AND NUTS BY USING A CHEATER BAR. EXPLAIN THAT THEY MIGHT BREAK THE WRENCH OR CAUSE THEMSELVES HARM.

- **29. SLIDE 29 EXPLAIN FIGURE 1.29** flat-tip (straight-blade) screwdriver. Width of blade should match width of slot in fastener being loosened or tightened.
- **30. SLIDE 30 EXPLAIN FIGURE 1.30** Two stubby screwdrivers that are used to access screws that have limited space above. A straight blade is on top and a #2 Phillips screwdriver is on the bottom.
- **31. SLIDE 31 EXPLAIN FIGURE 1.31** offset screwdriver is used to install or remove fasteners that do not have enough space above to use conventional screwdriver.
- **32. SLIDE 32 EXPLAIN FIGURE 1.32 I**mpact screwdriver used to remove slotted or Phillips head fasteners that cannot be broken loose using screwdriver

DEMONSTRATION: SHOW STUDENTS A VARIETY OF FLAT-TIP AND PHILLIPS SCREWDRIVERS. ASK THEM WHICH TYPE IS USED MORE ON AUTOMOBILES AND WHY. SHOW STUDENTS HOW TO USE OFFSET AND IMPACT SCREWDRIVERS. FOR WHAT TYPE OF APPLICATION IS EACH USED?











- **33. SLIDE 33 EXPLAIN FIGURE 1.33** ball-peen hammer.
- **34. SLIDE 34 EXPLAIN FIGURE 1.34** rubber mallet used to deliver a force to an object without harming surface.
- **35. SLIDE 35 EXPLAIN FIGURE 1.35** dead-blow hammer that was left outside in freezing weather. Plastic covering was damaged, which destroyed this hammer. The lead shot is encased in the metal housing and then covered.

DEMONSTRATION: SHOW EXAMPLES OF HAMMERS AND MALLETS. DISCUSS THE FEATURES OF EACH HAMMER OR MALLET AND DESCRIBE WHERE IT IS USED.

- **36. SLIDE 36 EXPLAIN FIGURE 1.36** Typical slip-joint pliers is a common household pliers. The slip joint allows the jaws to be opened to two different settings.
- **37. SLIDE 37 EXPLAIN FIGURE 1.37** Multigroove adjustable pliers is known by many names, including the trade name "Channel Locks®."
- **38. SLIDE 38 EXPLAIN FIGURE 1.38** Linesman's pliers are very useful because it can help perform many automotive service jobs.
- **39. SLIDE 39EXPLAIN FIGURE 1.39** Diagonal-cut pliers is another common tool that has many names.

<u>DEMONSTRATION:</u> SHOW EXAMPLES OF SLIP-JOINT & MULTIGROOVE ADJUSTABLE PLIERS AND DISCUSS HOW EACH IS USED.

- **40. SLIDE 40 EXPLAIN FIGURE 1.40** Needle-nose pliers are used where there is limited access to a wire or pin that needs to be installed or removed.
- **41. SLIDE 41 EXPLAIN FIGURE 1.41** Locking pliers are best known by their trade name Vise Grips®.
- **42. SLIDE 42 EXPLAIN FIGURE 1.42** Snap-ring pliers are also called lock ring pliers and most are designed to remove internal and external snap rings (lock rings).
- **43. SLIDE 43 EXPLAIN FIGURE 1.43** Files come in many different shapes and sizes. Never use a file without a handle.
- **44. SLIDE 44 EXPLAIN FIGURE 1.44** Tin snips are used to cut thin sheets of metal or carpet.
- **45. SLIDE 45 EXPLAIN FIGURE 1.45** utility knife uses replaceable blades & used to cut carpet & other materials












- **46. SLIDE 46 EXPLAIN FIGURE 1.46** Punch used to drive pins from assembled components. This type of punch is also called a pin punch.
- **47. SLIDE 47 EXPLAIN FIGURE 1.47** Warning stamped on side of punch warning that goggles should be worn when using this tool. Always follow safety warnings

DEMONSTRATION: SHOW EXAMPLES OF PUNCHES & CHISELS. DESCRIBE INTENDED PURPOSE OF EACH.

- **48. SLIDE 48 EXPLAIN FIGURE 1.48** Use grinder or a file to remove mushroom material on end of punch
- **49. SLIDE 49 EXPLAIN FIGURE 1.49** A typical hacksaw that is used to cut metal. If cutting sheet metal or thin objects, a blade with more teeth should be used
- **50. SLIDE 50 EXPLAIN FIGURE 1.50** typical beginning technician tool set that includes basic tools to get started.
- **51. SLIDE 51 EXPLAIN FIGURE 1.51** A typical large tool box, showing just one of many drawers.
- **52. SLIDE 52 EXPLAIN FIGURE 1.52** 12 volt test light.
- 53. SLIDE 53 EXPLAIN FIGURE 1.53 Electric and butane-powered soldering guns used to make electrical repairs. Soldering guns are sold by the wattage rating. The higher the wattage, the greater amount of heat created. Most solder guns used for automotive electrical work usually fall within the 60 to 160 watt range.
- **54. SLIDE 54 EXPLAIN FIGURE 1.54** A fluorescent trouble light operates cooler and is safer to use in the shop because it is protected against accidental breakage where gasoline or other flammable liquids would happen to come in contact with the light.
- **55. SLIDE 55 EXPLAIN FIGURE 1.55** A typical 1/2 inch drive air impact wrench. The direction of rotation can be changed to loosen or tighten a fastener.
- **56. SLIDE 56 EXPLAIN FIGURE 1.56** A typical battery-powered 3/8 inch drive impact wrench
- **57. SLIDE 57 EXPLAIN FIGURE 1.57** black impact socket. Always use an impact-type socket whenever using an impact wrench to avoid shattering socket, which could cause personal injury.
- **58. SLIDE 58 EXPLAIN FIGURE 1.58** An air ratchet is a very useful tool that allows fast removal and installation of fasteners, especially in areas that are difficult to reach or do not have room enough to move a hand ratchet

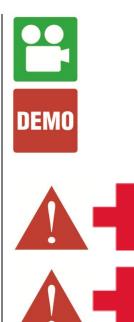







SHOP AIR

HTTP://MEDIA.PEARSONCMG.COM/PH/CHET/CHET_MYLABS/AKAMAI/TEMPLATE/VIDEO640X480.PHP?TITLE=COMPR ESSED%20AIR&CLIP=PANDC/CHET/2012/AUTOMOTIVE/AUTO_SHOP_SAFETY/CLIP25COMPAIR1.MOV&CAPTION=C HET/CHET_MYLABS/AKAMAI/2012/AUTOMOTIVE/AUTO_SHOP_SAFETY/XML/CLIP25COMPAIR1.XML

<u>DEMONSTRATION:</u> SHOW SHOP'S AIR COMPRESSOR & DISCUSS HOW IT WORKS. WHAT TYPES OF POWER TOOLS CAN BE USED WITH THE AIR COMPRESSOR? WHAT ARE SOME OTHER APPLICATIONS?

SAFETY REVIEW SAFETY PROCEDURES FOR USING AN AIR COMPRESSOR & POWER TOOLS ASSOCIATED WITH IT. AIR TOOLS ARE POWERFUL & CAN CAUSE INJURY IF NOT USED PROPERLY SAFETY NEVER POINT AN AIR BLOW GUN AT YOURSELF OR ANYONE ELSE.

NEVER USE COMPRESSED AIR TO SPIN A BEARING OR A GEAR TO MAKE A WHISTLING SOUND

SAFETY REMIND STUDENTS THEY SHOULD ALWAYS WEAR EYE PROTECTION WHEN USING POWER TOOLS AND OTHER SHOP EQUIPMENT.

- **59. SLIDE 59 EXPLAIN FIGURE 1.59** This typical die grinder surface preparation kit includes the air-operated die grinder as well as a variety of sanding disks for smoothing surfaces or removing rust.
- **60. SLIDE 60 EXPLAIN FIGURE 1.60** A typical pedestal grinder with a wire wheel on left side and a stone wheel on the right side. Even though this machine is equipped with guards, safety glasses or a face shield should always be worn whenever using a grinder or wire wheel.
- **61. SLIDE 61 EXPLAIN FIGURE 1.61 Safety glasses** should be worn at all times when working on or around any vehicle or servicing any components

"PERSONAL SAFETY" VIDEOS. VIDEO FOUND ON WWW.MYAUTOMOTIVELAB.COM

HTTP://MEDIA.PEARSONCMG.COM/PH/CHET/CHET_MYLABS/AKAMAI/TEMPLATE/VIDEO640X480.PHP?TITLE=PERSONAL%20 SAFETY&CLIP=PANDC/CHET/2012/AUTOMOTIVE/AUTO_SHOP_SAFETY/CLIP4PERSSAFE1.MOV&CAPTION=CHET/CHET_MYLA BS/AKAMAI/2012/AUTOMOTIVE/AUTO_SHOP_SAFETY/XML/CLIP4PERSSAFE1.XML



















- **62. SLIDE 62 EXPLAIN FIGURE 1.62 Steel-toed shoes** are a worthwhile investment to help prevent foot injury due to falling objects. Even these well-worn shoes can protect the feet of this service technician.
- **63. SLIDE 63 EXPLAIN FIGURE 1.63** One version of a **bump cap** is molded plastic insert worn inside a regular cloth cap.
- **64. SLIDE 64 EXPLAIN FIGURE 1.64** Protective gloves are available in several sizes and materials

HOLD <u>DISCUSSION</u> ON PPE ASK STUDENTS TO TALK ABOUT THE MAJOR TYPES OF PPES THEY SHOULD WEAR IN SHOP

RESEARCH INTERNET FOR OSHA: HAVE STUDENTS RESEARCH & REPORT ON HISTORY OF OSHA & WHAT THEY DO TODAY.

65. SLIDE 65 EXPLAIN FIGURE 1.65 Remove all jewelry before performing service work on any vehicle

<u>DISCUSSION</u> ON LONG HAIR IN SHOP: ASK STUDENTS ABOUT SAFETY HAZARD OF HAVING LONG HAIR AND HOW TO DEAL WITH IT

DEMONSTRATE: HOOKING UP EXHAUST HOSE:
DEMONSTRATE HOW TO CONNECT AN EXHAUST
HOSE TO A VEHICLE. THEN HAVE YOUR STUDENTS
PERFORM THIS TASK

- **66. SLIDE 66 EXPLAIN FIGURE 1.66** Always connect an exhaust hose to the tailpipe of a vehicle to be run inside a building.
- **67. SLIDE 67 EXPLAIN FIGURE 1.67** A binder clip being used to keep a fender cover from falling off.
- **68. SLIDE 68 EXPLAIN FIGURE 1.68** Covering the interior as soon as the vehicle comes in for service helps improve customer satisfaction.

STUDENTS COMPLETE SHOP SAFETY CHECKLIST

69. SLIDE 69 EXPLAIN FIGURE 1.69 All oily shop cloths should be stored in a metal container equipped with a lid to help prevent spontaneous combustion









- **70. SLIDE 70 EXPLAIN FIGURE 1.70** Most newer vehicles have a triangle symbol indicating the **recommended hoisting lift location**
- **71. SLIDE 71 EXPLAIN FIGURE 1.71** (a) **Tall safety stands** can be used to provide additional support for the vehicle while on the hoist. (b) A block of wood should be used to avoid the possibility of doing damage to components supported by the stand.
- **71. SLIDE 71 EXPLAIN FIGURE 1.71** (a) Tall safety stands can be used to provide additional support for the vehicle while on the hoist.
- **71. SLIDE 71 EXPLAIN FIGURE 1.71** (b) A block of wood should be used to avoid the possibility of doing damage to components supported by the stand.
- **72. SLIDE 72 EXPLAIN FIGURE 1.72** This training vehicle fell from the hoist because the pads were not set correctly. No one was hurt but the vehicle was damaged.
- 73. SLIDE 73 EXPLAIN FIGURE 1.73 (a) An assortment of hoist pad adapters that are often needed to safely hoist many pickup trucks, vans, and sport utility vehicles (SUVs). (b) A view from underneath Chevrolet truck showing how pad extensions are used to attach hoist lifting pad to contact frame
- 73. SLIDE 73 EXPLAIN FIGURE 1.73 (a) An assortment of hoist pad adapters that are often needed to safely hoist many pickup trucks, vans, and sport utility vehicles (SUVs).
- **73. SLIDE 73 EXPLAIN FIGURE 1.73 (b)** view from underneath Chevrolet truck showing how pad extensions are used to attach hoist lifting pad to contact frame
- **74. SLIDE 74 EXPLAIN FIGURE 1.74 (a)** pad arm is just contacting the rocker panel of the vehicle. (b) The pad arm has dented the rocker panel on this vehicle because the pad was set too far inward underneath the vehicle.
- **74. SLIDE 74 EXPLAIN FIGURE 1.74 (a)** The pad arm is just contacting the rocker panel of the vehicle.
- **74. SLIDE 74 EXPLAIN FIGURE 1.74 (b)** The pad arm has dented the rocker panel on this vehicle because the pad was set too far inward underneath the vehicle.
- **75. SLIDE 75 EXPLAIN FIGURE 1.75 (a)** hydraulic hand-operated floor jack. (b) Whenever a vehicle is raised off the ground, a safety stand should be placed under the







- frame, axle, or body to support the weight of the vehicle.
- **75. SLIDE 75 EXPLAIN FIGURE 1.75 (a)** A hydraulic hand-operated floor jack.
- **75. SLIDE 75 EXPLAIN FIGURE 1.75 (b)** Whenever a vehicle is raised off the ground, a safety stand should be placed under the frame, axle, or body to support the weight of the vehicle.

HOLD DISCUSSION ON SETTING UP LIFT

DEMONSTRATE HOW TO SET LIFT PADS

- **76. SLIDE 76 EXPLAIN FIGURE 1.76** Drive-on-type ramps are dangerous to use. The wheels on the ground level must be chocked (blocked) to prevent accidental movement down the ramp.
- **77. SLIDE 77 EXPLAIN FIGURE 1.77** Jumper cable usage guide. Follow the same connections if using a portable jump box.
- **78. SLIDE 78 EXPLAIN FIGURE 1.78** The air pressure going to the nozzle should be reduced to 30 psi or less to help prevent personal injury.

HAVE STUDENTS COMPLETE LIFTING VEHICLE TASK SHEET

- **79. SLIDE 79 EXPLAIN FIGURE 1.79** typical **fire extinguisher** designed to be used on type A, B, or C fires.
- **80. SLIDE 80 EXPLAIN FIGURE 1.80** CO₂ fire extinguisher being used on a fire set in an open drum during a demonstration at a fire training center.
- **81. SLIDE 81 EXPLAIN FIGURE 1.81** A treated wool blanket is kept in an easy-to-open wall-mounted holder and should be placed in a central location in the shop



DEMONSTRATE FIRE EXTINGUISHER ALONG WITH LOCATION OF FIRE BLANKET

HAVE STUDENTS COMPLETE FIRE EXTINGUISHER TASK SHEET 2











- **82. SLIDE 82 EXPLAIN FIGURE 1.82** A first aid box should be centrally located in the shop and kept stocked with the recommended supplies.
- **83. SLIDE 83 EXPLAIN FIGURE 1.83** A typical eye wash station. Often a thorough flushing of the eyes with water is the first and often the best treatment in the event of eye contamination

SHOW ANIMATION ON EYE WASH STATION

HTTP://MEDIA.PEARSONCMG.COM/PH/CHET/CHET_MYAUTOMOTIVELAB_2/ANIM ATIONS/A1_ANIMATION/CHAPTER01_FIG_01_15/INDEX.HTM

<u>DEMONSTRATE</u> USE OF EYE WASH STATION SHOW LOCATION OF FIRST AID & EYE WASH STATIONS. DEMO EYE WASH STATION

- **84. SLIDE 84 EXPLAIN FIGURE 1.84** A warning label on a **Honda HYBRID** warns that a person can be killed due to the high-voltage circuits under the cover.
- **85. SLIDE 85 EXPLAIN FIGURE 1.85** high-voltage disconnect switch in trunk on Prius. Rubber lineman's gloves MUST be worn when removing this plug.
- **86. SLIDE 86 EXPLAIN FIGURE 1.86** The high-voltage shut-off switch on a Ford Escape hybrid. The switch is located under the carpet at the rear of the vehicle.
- **87. SLIDE 87 EXPLAIN FIGURE 1.87** shut-off switch on a GM parallel hybrid truck is green because this system uses 42 volts instead of higher, and possibly fatal, voltages used in other hybrid vehicles
- 88. SLIDES 88-108 EXPLAIN LIFTING VEHICLE SLIDE SHOW