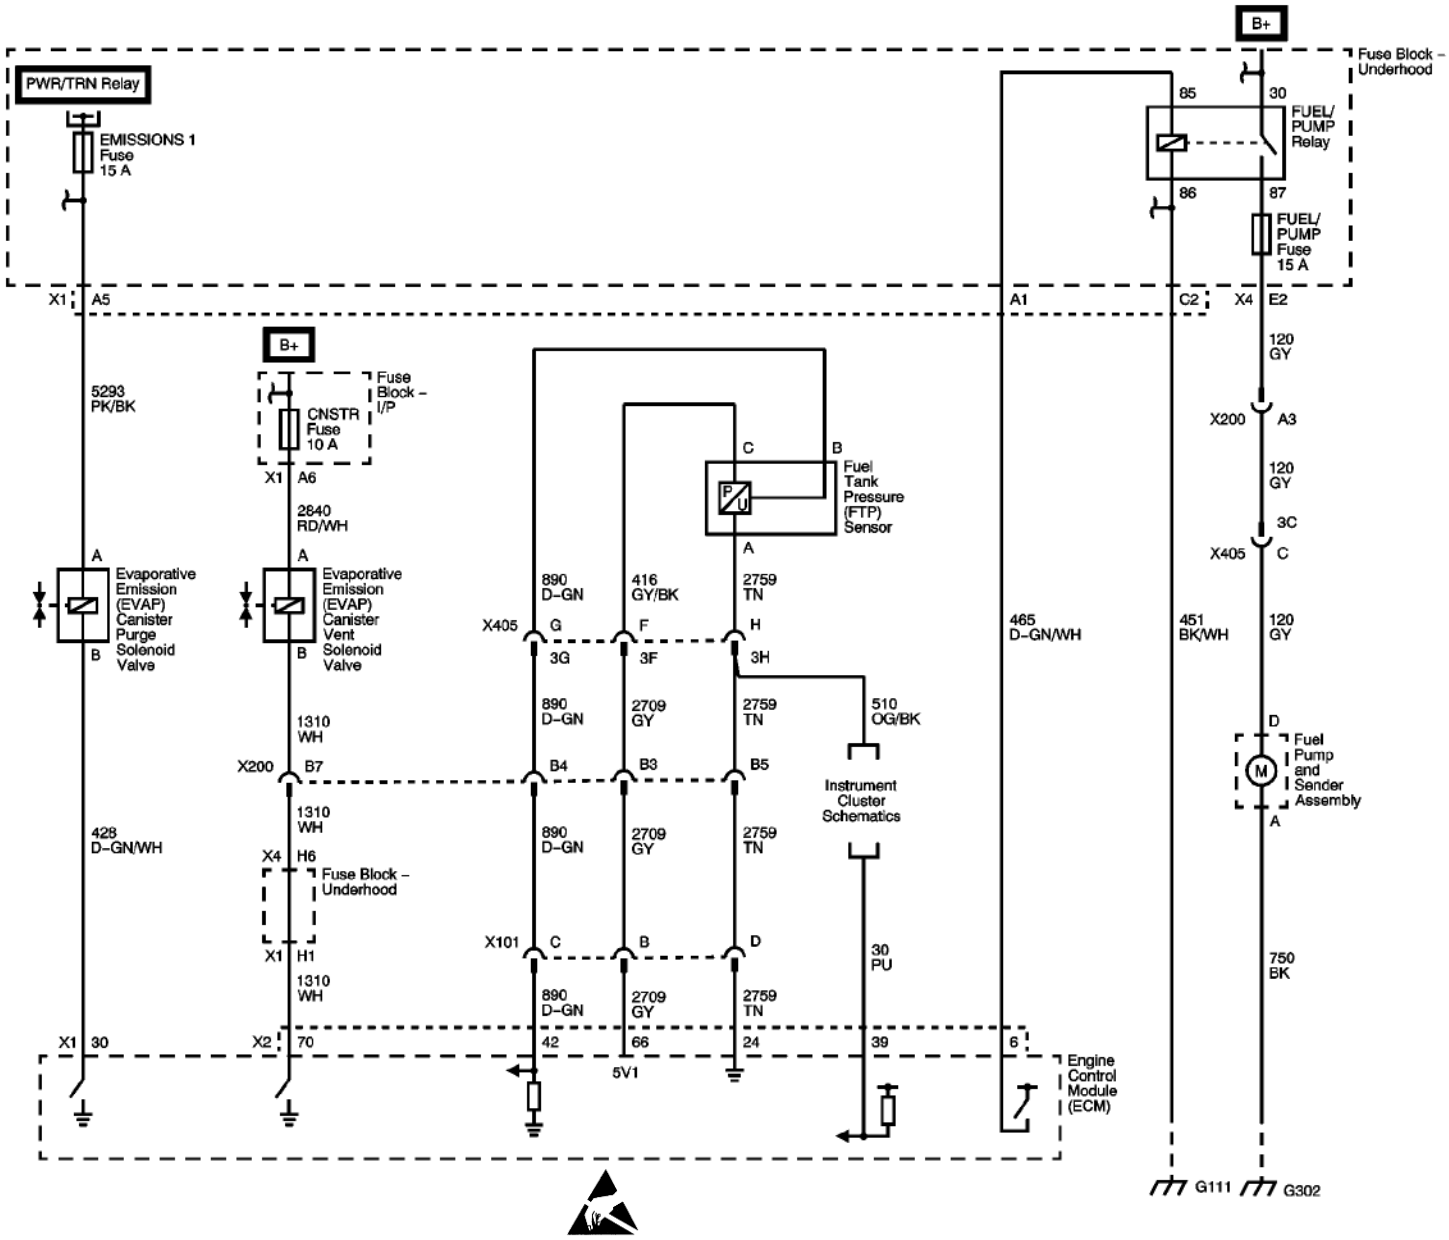
B+
Fuse Block – Underhood
PWR/TRN Relay
EMISSIONS 1 Fuse 15 A
85
30
FUEL/ PUMP Relay
86
87
FUEL/ PUMP Fuse 15 A
X1
A5
A1
C2
X4
E2
120 GY
X200
A3
120 GY
3C
X405
C
5293 PK/BK
B+
Fuse Block – I/P
CNSTR Fuse 10 A
X1
A6
2840 RD/WH
C
B
Fuel Tank Pressure (FTP) Sensor
A
A
Evaporative Emission (EVAP) Canister Purge Solenoid Valve
B
A
Evaporative Emission (EVAP) Canister Vent Solenoid Valve
B
890 D-GN
416 GY/BK
2759 TN
X405
G
F
H
3G
3F
3H
465 D-GN/WH
451 BK/WH
120 GY
890 D-GN
2709 GY
2759 TN
510 OG/BK
D
1310 WH
X200
B7
B4
B3
B5
Fuel Pump and Sender Assembly
M
A
Instrument Cluster Schematics
1310 WH
890 D-GN
2709 GY
2759 TN
428 D-GN/WH
X4
H6
Fuse Block – Underhood
X1
H1
X101
C
B
D
30 PU
750 BK
1310 WH
890 D-GN
2709 GY
2759 TN
X1
30
X2
70
42
66
24
39
6
5V1
Engine Control Module (ECM)
G111
G302